

## E-MICRO/1W: How to send SMS Alert Messages without using a USB modem and SIM Card

To send an SMS text message alert to a phone without the need of a modular SIM card, send the message as an email to an SMS or MMS Email address. The email will be converted to and sent as a text message without the additional cost.

An Email message can be a maximum of 160 characters when it is converted to an SMS text message, whereas an MMS Email message can be in excess of 400 characters and can have photos attached to the message.

Cellular service providers have different SMS/MMS Email address formats for email to text conversion. For example, the SMS address for Verizon Wireless is tendigitphonenumber@vtext.com, and their MMS address is tendigitphonenumber@vzwpix.com. Format an email address using the phone number of each user that will receive the SMS/MMS message alert. Email addresses for cellular providers can be found online.

Enter the recipients' email address in the ENVIROMUX web server under Administration > User Settings > Contact Settings > Email Address. Be sure to put a checkmark in to enable "E-mail Alerts".

Groups	Group 1 Group 2 Group 3 Group 4 Group 5 Group 6 Group 7 Group 8							
E-mail Alerts	User receives alerts via e-mail							
E-mail Address	E-mail address for the user							
E-mail Datalog	User receives datalog via e-mail							
Datalog Email Frequency	30 Min ▼ Select Frequency of Datalog e-mail. Applies to all users.							
Syslog Alerts	User receives alerts via syslog							
SNMP Traps	User receives alerts via SNMP traps							
Syslog/SNMP IP Address	IP address where syslog messages/SNMP traps are sent for this user							
Authentication Protocol	MD5 ▼ Select authentication protocol.							
Authentication Passphrase	The authentication passphrase							
Privacy Protocol	AES ▼ Select privacy protocol.							
Privacy Passphrase	The privacy passphrase							
Syslog Facility	Local.0  Select Syslog Facility to send Syslog messages.							
SMS Alerts	User receives alerts via SMS							
SMS Number	Phone number where SMS messagess are sent for this user							
Remote Datalog	User receives datalog via syslog							

Users will only receive the SMS/MMS Email alerts from sensors that have email alerts enabled, since the email to SMS/MMS text message alert is sent from the ENVIROMUX as an email.

Make sure all sensors within the group the user receives notifications for have email alerts enabled. To enable an alert, select to edit a sensor. Then, select "Alert Settings" > Enable Email Alerts.

Alert Settings										
Associated Sensor	Internal Temperature Sensor associated to this alert									
Groups	<b>V</b> Group 1	Group 2	Group 3	Group 4	Group 5	Group 6	Group 7	Group 8		
Trigger Event	Greater than ▼									
Threshold	50.00 Threshold value									
Alert Delay	2 (sec) Duration the sensor must be out of thresholds before alert is generated									
Auto Acknowledge	Automatically acknowledge alert when sensor returns to normal status									
Notify on return to normal	Send a notification when this sensor returns to normal status									
Notify Again Time	120 (min) Time after which alert notifications will be sent again									
Enable Syslog	Send alerts for this event via syslog									
Enable SNMP Traps	Send alerts for this event via SNMP traps									
Enable E-mail Alerts	Send alerts for this event via e-mail									
Enable SMS Alerts	Send alerts for this event via SMS messages									

Save