

ENVIROMUX-IPCAM-NPOE

Megapixel PoE Day/Night PTZ Internet Camera

• Quick Installation Guide (1)



1. Before You Start

Package Contents

- ENVIROMUX-IPCAM-NPOE
- CD-ROM (Utility and User's Guide)
- Multi-Language Quick Installation Guide
- Network cable (1.5 m / 5 ft.)
- Mounting kit
- Power adapter (12V DC, 1.25A)

Minimum Requirements

- A computer with an Ethernet port and web browser
- CD-ROM drive
- Wired network (e.g. router or switch with DHCP server)
- Power over Ethernet (PoE) switch or PoE Injector

Note:

The camera only works with Power over Ethernet (PoE) devices that follow the IEEE 802.3af standard.

Software **Requirements**

Supported Operating Systems	1-8 Cameras		9-32 Cameras	
	CPU	Memory	CPU	Memory
Windows 7 (32/64-bit) / Windows Server 2008 / Windows Vista (32/64-bit) / Windows Server 2003 / Windows XP (32/64-bit)	2GHz	2GB RAM or above	2GHz	4GB RAM or above

2. Hardware Installation and Configuration

- Do not install or mount the IP camera until after you complete the installation steps below. Temporarily place the IP camera next to your computer.
- 2. Insert the Utility CD-ROM into your CD-ROM drive.
- 3. Click Install Camera and follow the instructions.




 Congratulations! Your camera is now connected to your network. Click link to confirm access to the management interface.



- Once the management interface has opened in your web browser, save the link of the IP address to your desktop for ease of access.
- **6.** See the User's Guide for information concerning advanced management functions.
- Install the camera in your desired location. To connect the IP camera to your network using the PoE functionality, please use either of the following methods:

Using the ENVIROMUX-IPCAM-NPOE with a PoE switch

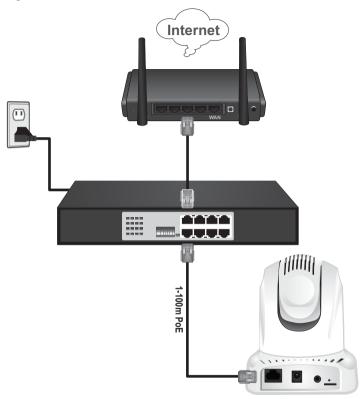

- Connect the provided network cable from the Power over Ethernet switch to the network port on the IP Camera.
- 2. Connect the switch to your network.

Using the ENVIROMUX-IPCAM-NPOE with an Injector



- 1. Connect the power adapter to the Injector and then to a power outlet
- 2. Connect a network cable from the Camera to the Injector's PWR+DATA OUT port
- Connect a network cable from a switch or router to the Injector's DATA IN port.

Note:

- To manage multiple cameras and for more advanced features, please install the Camera software. Install the software and refer to the User's Guide on the CD for more information.
- Two User's Guides are included one for the camera and one for the complementary management software.