



# ENVIROMUX-VSS VIBRATION SENSOR WIRING INSTRUCTION




## ENVIROMUX-VSS (View with cover removed)

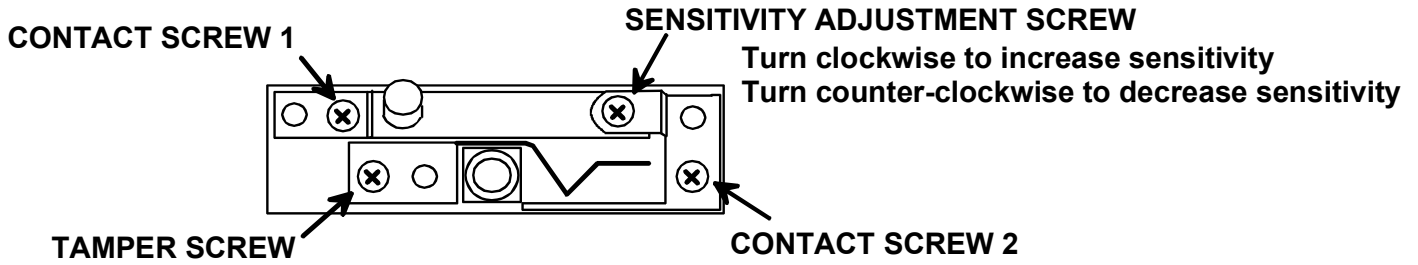

### Schematic for wiring Vibration Sensor to DIGITAL IN Terminals

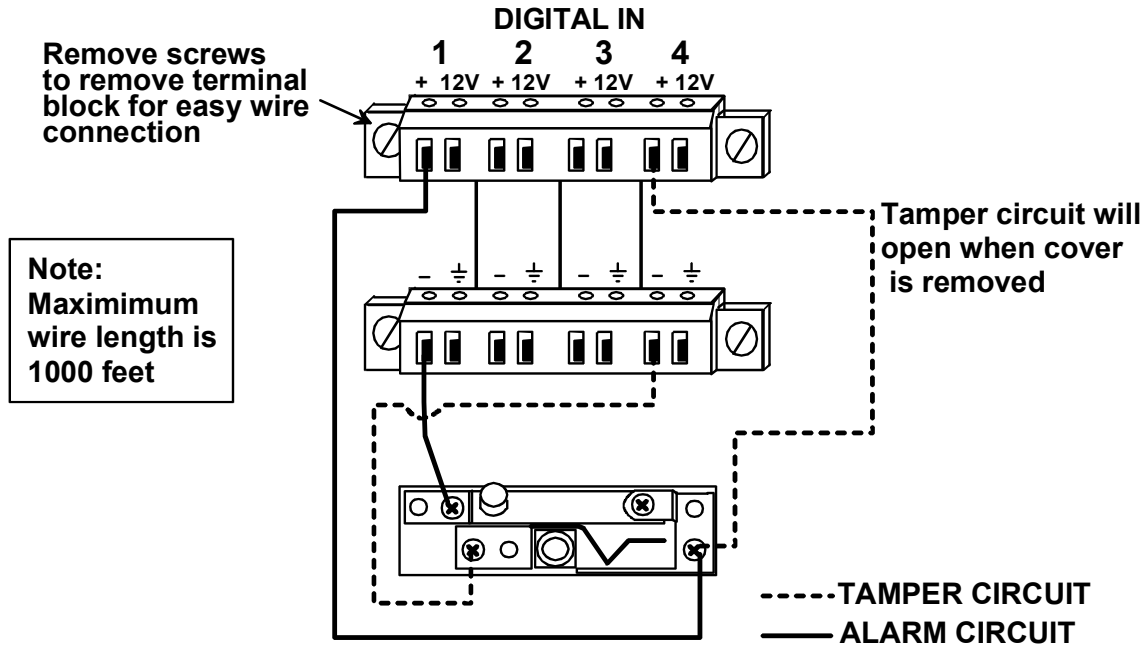

### Schematic for wiring Vibration Sensor to RJ45 Socket

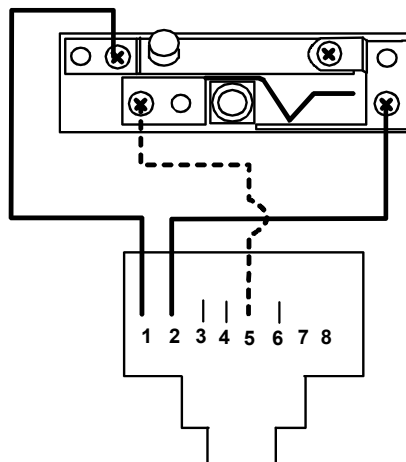

View looking into RJ45 Socket