



NTI® NETWORK
TECHNOLOGIES
INCORPORATED

1275 Danner Dr Tel:330-562-7070
Aurora, OH 44202 Fax:330-562-1999
www.networktechinc.com

RACKMUX® Series

RACKMUX-VS17-T

RACKMUX-DS17-T

**Rackmount Drawer with SUN
Keyboard, LCD Monitor and
Trackball**

Installation and Operation Manual



TRADEMARK

RACKMUX is a registered trademark of Network Technologies Inc in the U.S. and other countries.

COPYRIGHT

Copyright © 2007, 2008 by Network Technologies Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Network Technologies Inc, 1275 Danner Drive, Aurora, Ohio 44202.

CHANGES

The material in this guide is for information only and is subject to change without notice. Network Technologies Inc reserves the right to make changes in the product design without reservation and without notification to its users.

CE Statement

We, Network Technologies Inc, declare under our sole responsibility that the RACKMUX-VS17-T, RACKMUX-DS17-T, RACKMUX-VS17-TN, and RACKMUX-DS17-TN are in conformity with European Standard EN55022.

Typographic Conventions

The following table describes the typographic changes used in this instruction.

Typeface	Meaning	Example
AAaaBBaaCCcc123	On-screen computer output	C:>
AAaaBBaaCCcc123	What you type, contrasted with on-screen computer output; keyboard keys to press	C:> L Press the Fn key

TABLE OF CONTENTS

Introduction.....	1
Features and Functions.....	2
Installation	3
Rack Mounting Instructions	3
Optional Telco 2-Post Mounting	4
Connect to a CPU.....	4
Connect Extra Device	5
Connect Power	6
Power Up	6
Display Functions.....	7
Standard Controls.....	7
OSD Control Menu	7
OSD Main Menu- VGA Monitor	7
Brightness/Contrast Menu	8
Color Menu	8
Position Menu	8
Setup Menu	9
OSD Main Menu- DVI Monitor	9
Brightness/Contrast Menu	10
Setup Menu	10
Keyboard Functions	11
Function Key Operation	11
Number Pad.....	12
Other Functions of the "Fn" Key	13
Power Key	13
Numeric Keypad Option.....	14
SAFETY.....	15
RACKMUX-VS17 Drawer Standard Specifications.....	16
General Specs	16
LCD.....	16
Display Controller: VGA.....	16
Display Controller: DVI	16
OSD Control Board.....	16
Keyboard.....	17
Trackball	17
Touchpad (option).....	17
DC Power (option)	17
Troubleshooting.....	18
Index.....	18
Warranty Information.....	18

TABLE OF FIGURES

Figure 1- Mount RACKMUX to a standard rack.....	3
Figure 2- Position RACKMUX with clearance to open	3
Figure 3- Mount to Telco post with optional mounting brackets	4
Figure 4- Connect a SUN USB CPU.....	4
Figure 5- Cables for DVI video application.....	5
Figure 6- Connect a USB device to the front (optional).....	5
Figure 7- Connect the power cord	6
Figure 8- OSD Controls	7
Figure 9- US (English) Keyboard Layout	11
Figure 10- Keyboard LED Indications	11
Figure 11- Keys of the Number Pad	12
Figure 12- Additional multi-function keys	13
Figure 13- U.S. SUN Keyboard with numeric keypad	14

INTRODUCTION

The RACKMUX-VS17-T Drawer consists of a SUN Keyboard, Trackball, and LCD monitor integrated into a 1RU rack mountable drawer with wrist pads. When access to a server rack is needed, the drawer can be pulled out and the display lifted up like a notebook computer, revealing the keyboard and trackball. When the drawer is not in use, the display can be folded forward and down so the 1RU drawer can be pushed into the cabinet easily and smoothly, helping to organize and streamline busy server rooms. The NTI RACKMUX product line offers a range of KVM Drawer solutions ideal for rack and server management applications, which will ensure reliability and serviceability.

The RACKMUX drawer includes an industrial grade 17" LCD monitor, a notebook-style keyboard with SUN extra keys and a three-button trackball. The standard video format is VGA (-VS17-T), but single-link DVI support is optional (-DS17-T).

The keyboard and mouse interface supports SUN USB protocol and is compatible with SUN platform CPUs.

Installing the RACKMUX into any server environment will offer:

- A space saving 1RU design, easily mountable in any 19" cabinet/rack
- A forward-folding 17" TFT LCD with built-in OSD menu for screen adjustments
- Auto shut-OFF switch: Turns OFF the power to the monitor when the LCD is in a folded-closed position.
- Built-in 83-key (US) or 84-key (Europe) keyboard plus 14 SUN extra keys
- Standard 3-button trackball (3-button touchpad mouse optional)
- Support for USB connection of the keyboard and trackball.
- Support for VGA or single-link DVI signals
- Front-access USB port for easy accessory USB 1.1 device connection
- An internal cable arm for proper cable management when sliding the drawer open and closed
- Added security with a drawer lock to prevent unwanted access
- Locking rails to prevent movement of the drawer when fully extended
- Built-in universal (100-240VAC) low power consumption power supply
- Multi-language support including: US(English), UK (English), German, French, Italian, Spanish

Materials Included with this kit:

- ✓ NTI RACKMUX-VS17-T Drawer
- ✓ IEC Power Cord- country specific
- ✓ CD with pdf file of this owner's manual
- ✓ USB-AB-2M 2 meter USB Type A male-to-USB Type B male cable
- ✓ 2 Keys for Lock
- ✓ 2 Rear Mounting Brackets with nuts
- ✓ 8 #10-32x3/4" screws and cage nuts for mounting to a rack
- ✓ VEXT-THN-6-MM 6 foot VGA video cable (**models with VGA Video support only**)
- ✓ DVI-DS-2M-MM 2 meter DVI video cable (**models with DVI Video support only**)

Optional Cable:

USBVEXT-xx-MM for VGA Monitor and USB Keyboard and Mouse input (available in 3,6,10, and 15 foot lengths)


where:

xx is the length of the cable in feet

MM indicates male-to-male connector

Options:

- DC Power option- for use with 36-72VDC input- add "48V" to the part number (i.e. RACKMUX-VS17-T**48V**)
- Touchpad mouse- drawer will have a touchpad-style mouse instead of a trackball- remove the "-T" from the part number (i.e. RACKMUX-VS17)
- Rackmounting kit for two-post Telco rack - order RL-T15-TEL
- RACKMUX drawer with DVI support, instead of VGA- order RACKMUX-**DS**17-T.
- Numeric keypad option- for a separate 17-key numeric keypad, add "-N" to the part number (i.e. RACKMUX-VS17-**TN**)

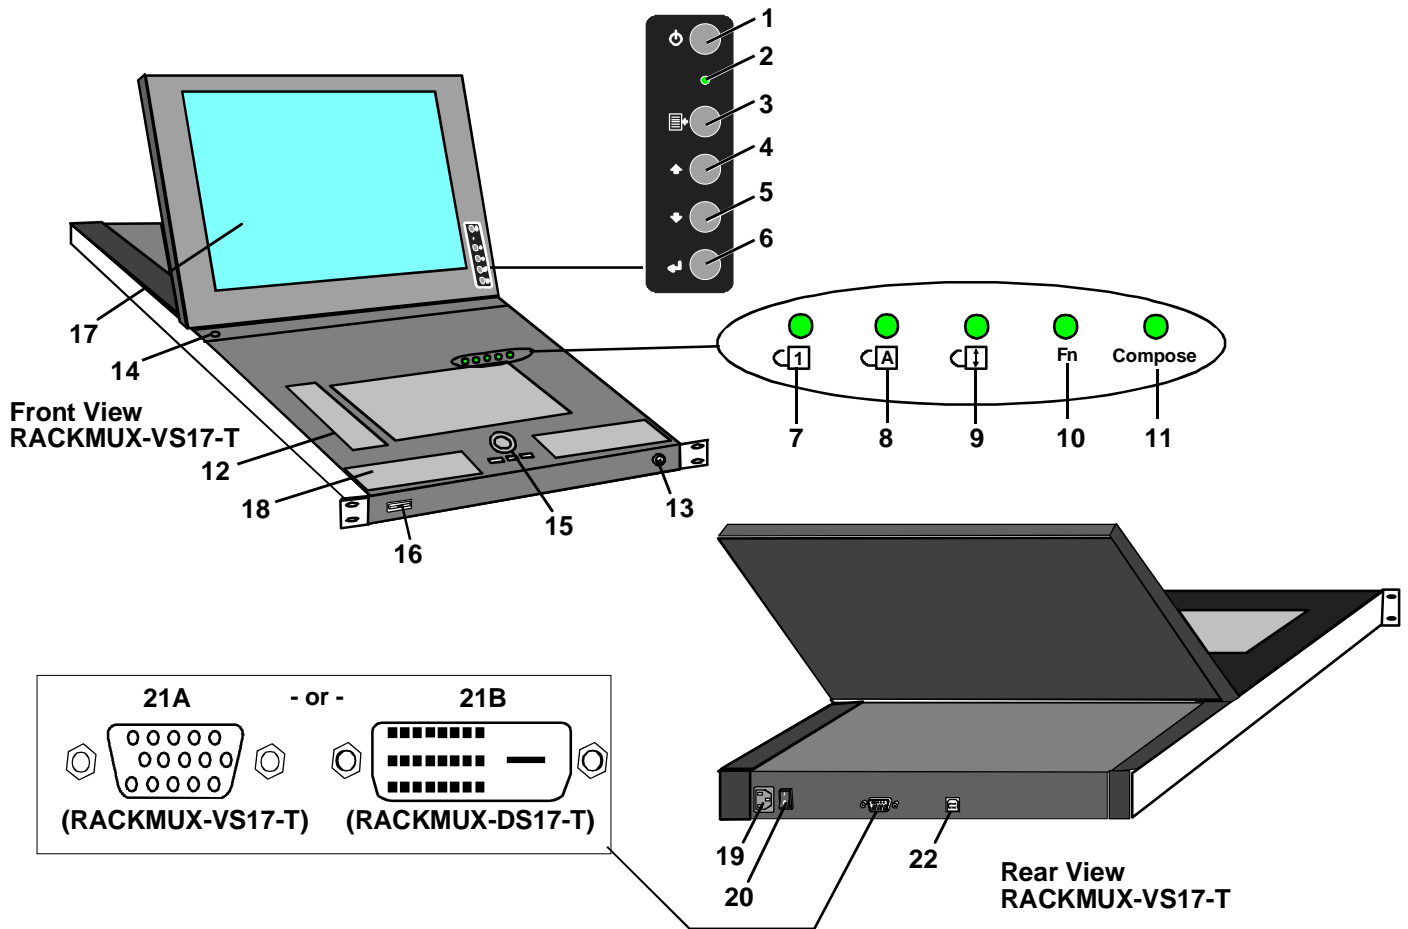

FEATURES AND FUNCTIONS

1. **Power Button**- press to turn the LCD monitor ON and OFF
2. **Power LED**- Indicates operation status
Green = Power-ON, Video Input Signal OK
Red = Suspend / Stand-by, or no Video Input Signal
3. **Menu Button**- press to turn ON the OSD menu
4. **Up Arrow Button**- press to move the cursor in the OSD menu up
5. **Down Arrow Button**- press to move the cursor in the OSD menu down
6. **Select Button**- press to select a menu item (when OSD menu is ON) or press to auto adjust the video quality (when OSD menu is OFF)
7. **NumLock LED**- illuminates when the number lock is ON
8. **CapsLock LED**- illuminates when CapsLock is ON
9. **Scroll Lock LED**- illuminates when the Scroll Lock keyboard feature is ON.
10. **Fn LED**- illuminates when Function Features are enabled (see page 11) .
11. **Compose LED**- illuminates when the SUN compose feature is locked ON
12. **Keyboard**- for manual data entry and computer control
13. **Keylock**- to prevent unauthorized use of the RACKMUX
14. **Auto Shut-OFF**- switch automatically shuts OFF the LCD display when the monitor is folded down
15. **Trackball** - for controlling mouse movements on the monitor and controlling the computer
16. **USB Port**- USB Type A female- for connection of any USB 1.1 compatible device (such as a flashdrive, printer, etc)
17. **LCD Display**- for viewing the video signal from the connected CPU
18. **Wrist Pads**- for user comfort
19. **IEC Connector**- for attachment of the IEC power cord to power the RACKMUX drawer
20. **Switch**- for powering ON and OFF the RACKMUX drawer
21. **Video In- 21A**. 15HD Female- for connection of the DVI video cable from the CPU (only in models that support VGA)
21B. DVI-D Female- for connection of a DVI-D video cable from the CPU (only in models that support DVI)
22. **USB**- USB Type B female- for connection of the USB devices cable from a USB CPU

INSTALLATION

Rack Mounting Instructions

The RACKMUX was designed to be mounted to a rack and includes mounting flanges to make attachment easy.

1. Determine the mounting height in the rack for the drawer. It should be a height comfortable to use the keyboard and see the LCD display. Mark holes in each of the 4 corner cabinet rails at points all level with each other.
2. Secure the rear brackets to the rear rack cabinet rails. Apply the top screws (supplied) for each bracket to the holes marked in step 1.
3. Lift the keyboard into position and line the studs on the left and right sides up with the slotted openings in the rear bracket. Apply the nuts (supplied) to the studs but do not tighten the nuts yet.

FYI: There are 4 mounting studs provided on each side of the RACKMUX. Depending on the depth of the rack and distance apart of the cabinet rails, the position of the rear bracket may make all 4 studs available for use. In this case, apply the 2 nuts to the studs furthest apart from each other on each side.

4. Slide the drawer in until the top holes in the front bracket flanges line up with the holes marked in step 1. Secure the front brackets on the drawer to the front cabinet rails with two more screws per bracket. Be sure to tighten the screws securely. Then tighten the nuts applied in step 3.
5. Apply one more screw to each of the rear brackets to finish.

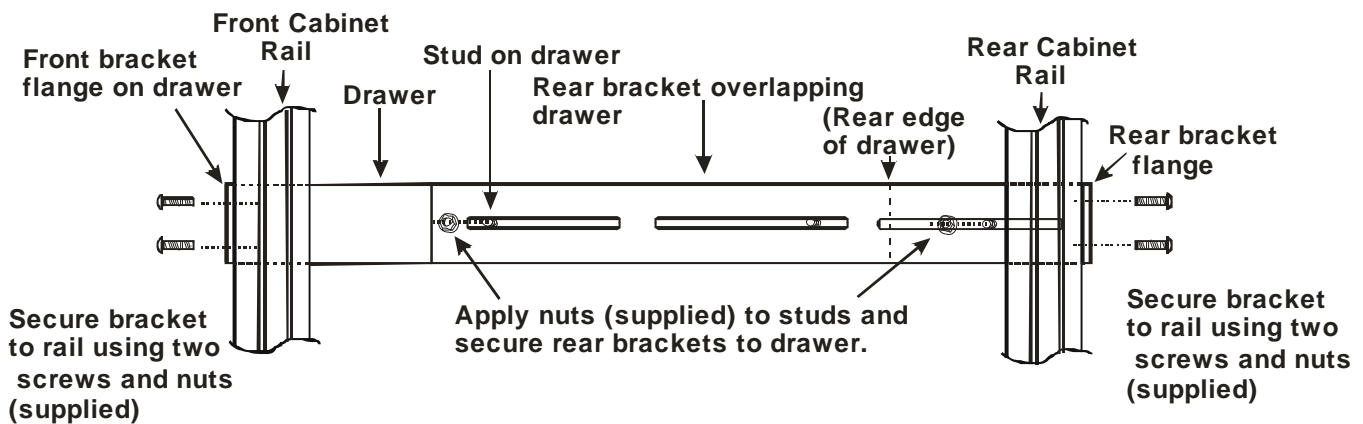


Figure 1- Mount RACKMUX to a standard rack

Note: To provide sufficient room for the LCD monitor to be opened to a proper viewing angle (a minimum 90 degree position from the keyboard), ensure that all devices mounted above the RACKMUX extend no more than 1.75" from the rack frame. (See Fig. 2)

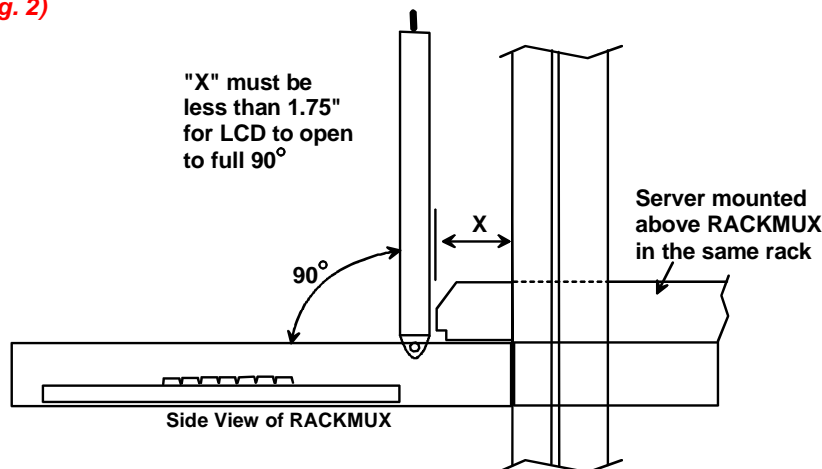


Figure 2- Position RACKMUX with clearance to open

Optional Telco 2-Post Mounting

If the Telco 2-post mounting bracket kit (NTI# RL-T15-TEL) is to be used, secure the short and long brackets to each side of the drawer as shown in Fig. 2. Apply 2 nuts (supplied) per bracket to secure the brackets to the drawer. Apply two #10-32x3/4" screws (supplied) per bracket to the post at the desired height. Slots are provided in the brackets to make minor depth adjustments easy. Be sure to properly tighten all nuts and screws before using the drawer.

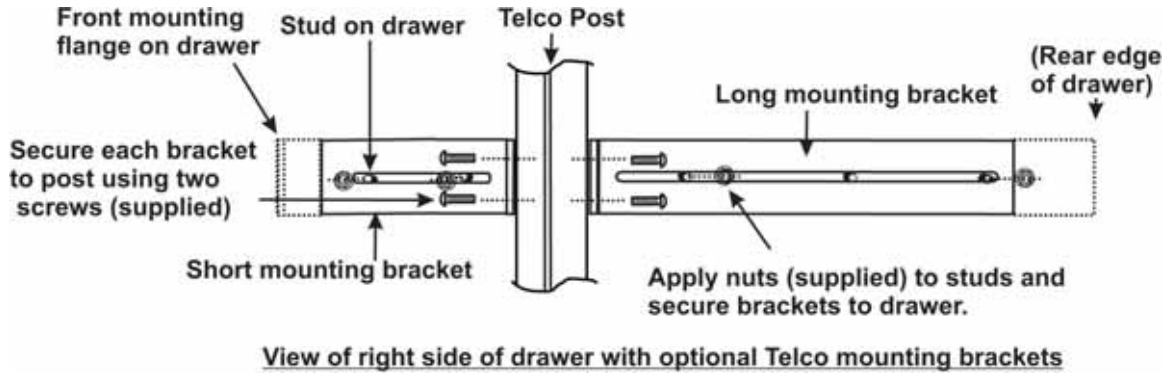


Figure 3- Mount to Telco post with optional mounting brackets

Connect to a CPU

The RACKMUX-VS17-T may be connected to a USB CPU with a VGA video port using the USB-AB-2M and VEXT-6-MM cables provided as shown in Fig. 4.

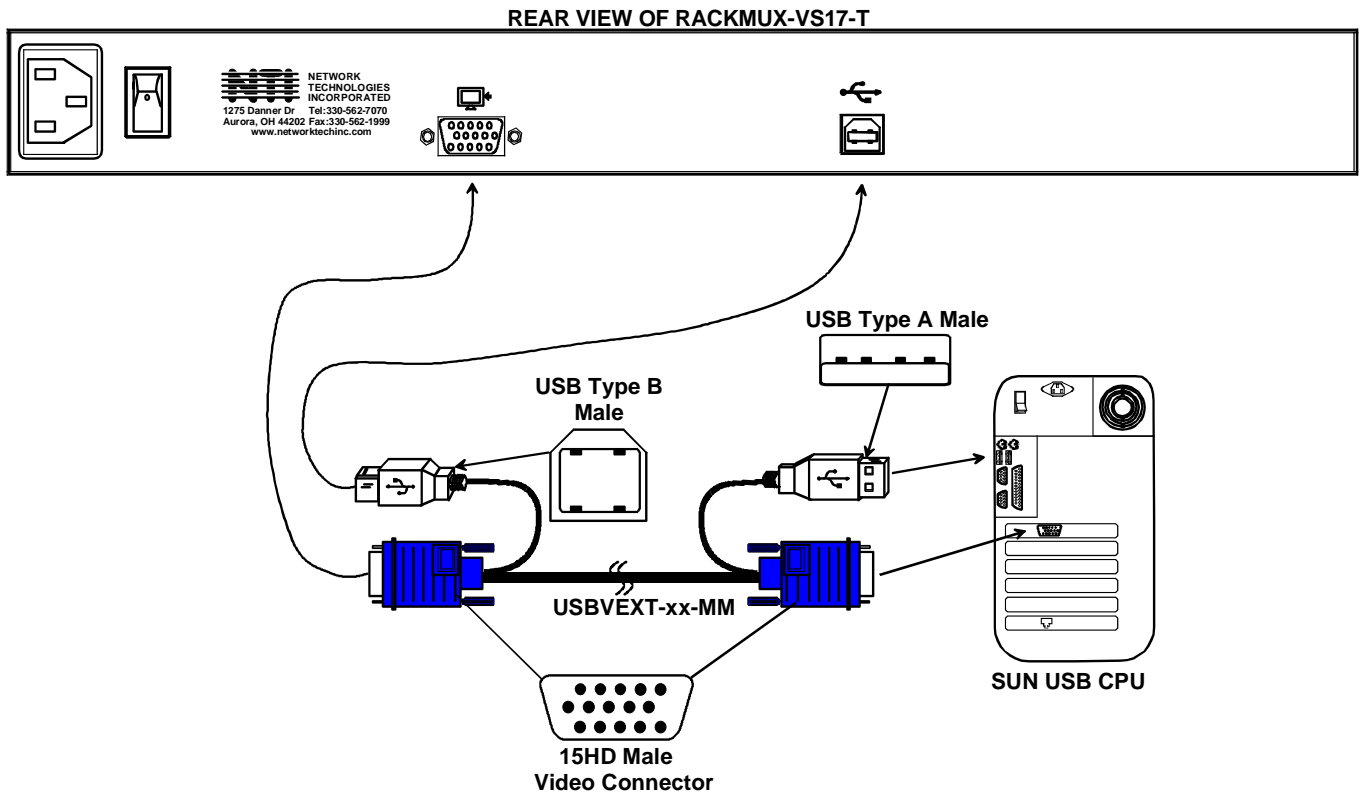


Figure 4- Connect a SUN USB CPU

When connecting a CPU with DVI support (RACKMUX-DS17-T) to the single-link DVI port of the RACKMUX, use the DVI-DS-2M-MM (supplied with DS17 models) for the DVI video signal and the USB-AB-2M (supplied) for the USB connection between the CPU and RACKMUX.

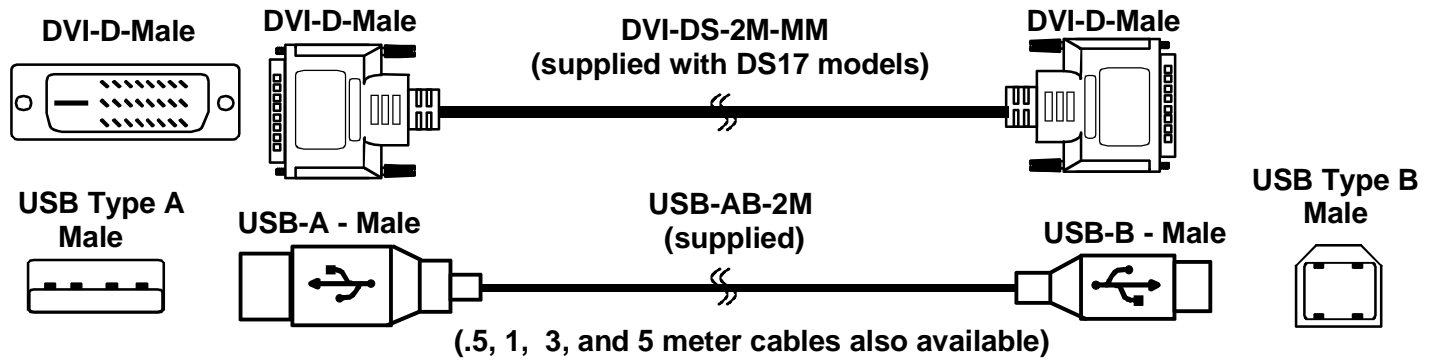


Figure 5- Cables for DVI video application

Connect Extra Device

On the front of the RACKMUX-VS17-T is an additional USB Type A port to be used, if desired, for an extra accessory. Any low or full speed USB device may be connected to this port to be used. This port is fully compliant with USB 1.1 standard.

Note: If a USB keyboard or mouse is connected, operation of the RACKMUX-VS17-T keyboard or trackball may cause unpredictable results. Do not try to use both mice or both keyboards at the same time.

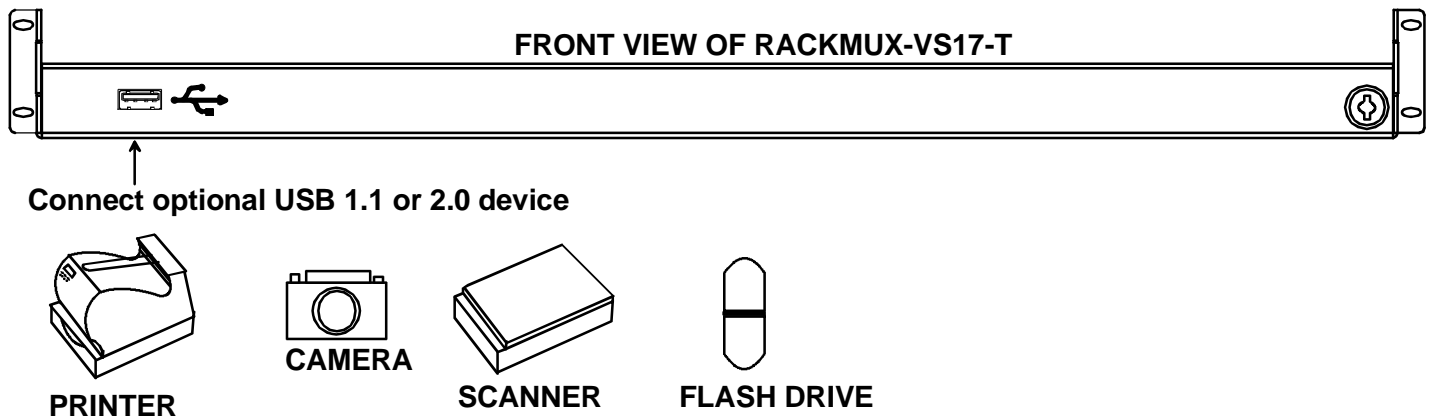


Figure 6- Connect a USB device to the front (optional)

Note: If a USB 2.0 device is connected to the optional USB device port, it will operate at USB 1.1 speed.

Connect Power

Connect the IEC power cord to the power port as shown below.

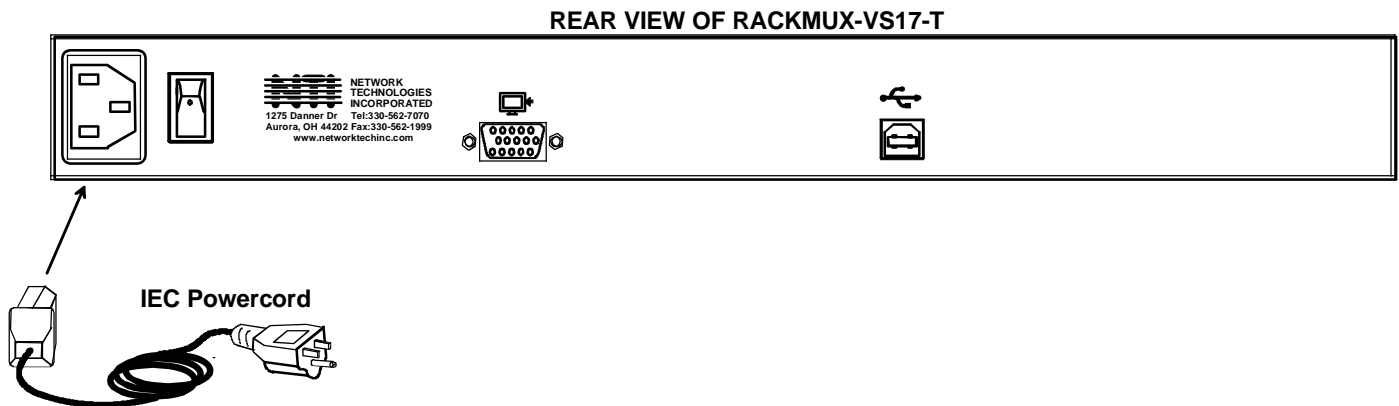


Figure 7- Connect the power cord

Power Up

Power up the RACKMUX-VS17-T and connected computer in this order.

1. Power On the RACKMUX-VS17-T
2. Power ON the attached CPU.

If a device is plugged into the USB port on the front of the RACKMUX, it can powered-ON at any time.

Note for DVI monitors only: If the message “NO SIGNAL” appears when the monitor is powered-ON, the monitor may be set for a “PC” (VGA) input source. Press the Up Arrow button on the monitor to toggle the monitor input source setting to “Digital” (DVI). (See also page 7)

DISPLAY FUNCTIONS

Standard Controls

The RACKMUX has 5 standard control buttons and a power LED. The 5 standard control buttons operate as follows:

- The **Power** button turns the RACKMUX LCD and backlight ON and OFF as desired.
- The **Power LED** located immediately below the Power button is a dual color LED. It will illuminate with a green color when the RACKMUX is powered ON and working properly. It will illuminate with a red color if the RACKMUX is powered ON but there is no input signal detected.
- The **Menu** button is used to bring up the OSD menu where the various settings of the LCD display can be adjusted. Once the OSD screen is displayed, the Menu button is used to make selections within the menus. See "OSD Control Menu" (below) for more on LCD display settings.
- The **Up and Down Arrow** buttons are used to navigate through the menus. Move the cursor up or down as desired to highlight an item for selection. Once an item is highlighted, pressing the Menu button will select it.

Note: On DVI monitors, when the OSD Menu is OFF, the Up Arrow is used to toggle between a "PC" (VGA) and "Digital" (DVI) input source.

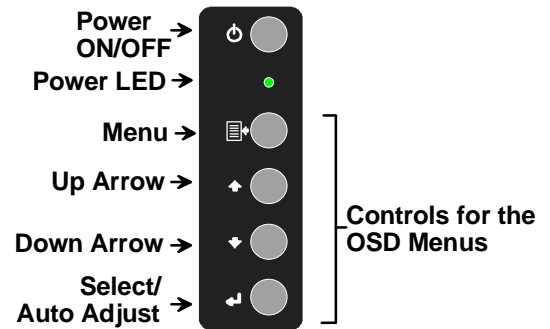


Figure 8- OSD Controls

- The **Select** button is used to make selections within the OSD menus when the OSD menu is ON. When the OSD menu is OFF, the Select button will act as an **Auto Adjust** button to keep the user from having to use the menus to adjust the quality of the image on the monitor.

Note: In order to display the OSD Menu, the RACKMUX must first be connected to a video source (see "Connect to a CPU" – page 4).

Note for DVI monitors only: If the message "NO SIGNAL" appears when the monitor is powered-ON, the monitor may be set for a "PC" (VGA) input source. Press the Up Arrow button on the monitor to toggle the monitor input source setting to "Digital" (DVI).

OSD Control Menu

The OSD (On Screen Display) Menu enables the user to select the desired characteristics of the LCD display. To activate the OSD Menu, press the Menu button (above). To turn the Menu back OFF, either select "EXIT" from the main menu or just wait 10-60 seconds and it will automatically be cleared from the screen.

OSD Main Menu- VGA Monitor



Selection	Purpose	Range
Brightness/Contrast	Increase/decrease panel brightness/contrast level	1-100
Color	R,G,B color temperature control	1-100
Position	<ul style="list-style-type: none"> • Video image horizontal and vertical position control • Clock setting • Phase control 	1-100

Selection	Purpose	Range
Setup	<ul style="list-style-type: none"> Control OSD image position on screen Set time OSD will stay on screen before auto shutoff Select the language of the OSD menu 	-- 10 to 60 seconds Several languages (see page 8)
Exit	Exit from the OSD control menu	


Brightness/Contrast Menu

Selecting the Brightness/Contrast menu will bring up a screen in which the user can adjust the brightness and contrast levels of the LCD display. With either the BRIGHTNESS or CONTRAST sections highlighted, (use the Up or Down arrow to move between them), press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting. Select EXIT when finished to return to the Main Menu.




Color Menu

Selecting the Color menu will bring up a screen in which the user can adjust the Red, Green, and Blue color levels (values from 1-100) of the LCD display. With the RED, GREEN, or BLUE sections highlighted, (use the Up or Down arrow to move between them), press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting. Select EXIT when finished to return to the Main Menu.

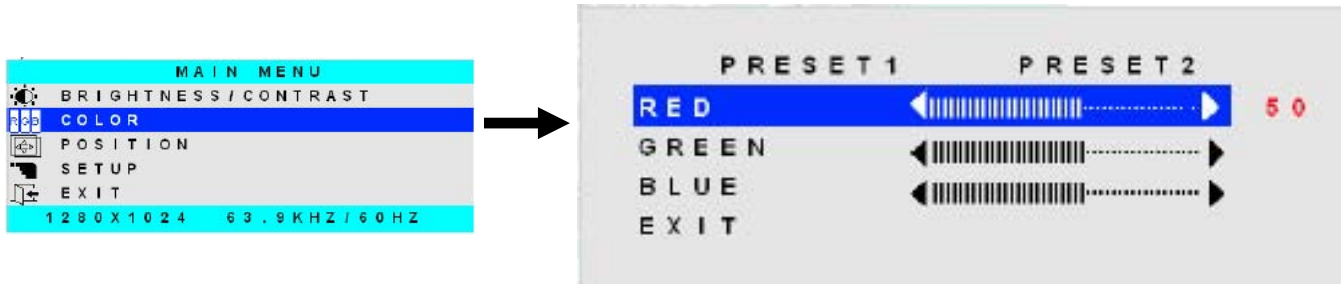

Position Menu

Selecting the Position menu will bring up a screen in which the user can select AUTO ADJUST to automatically adjust the horizontal and vertical position of the displayed image on the monitor, as well as adjust the clock and phase settings if they are not correct. The user can also individually adjust these settings if so desired. With any of the sections highlighted, (use the Up or Down arrow to move between them), press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting as needed. Select EXIT when finished to return to the Main Menu.

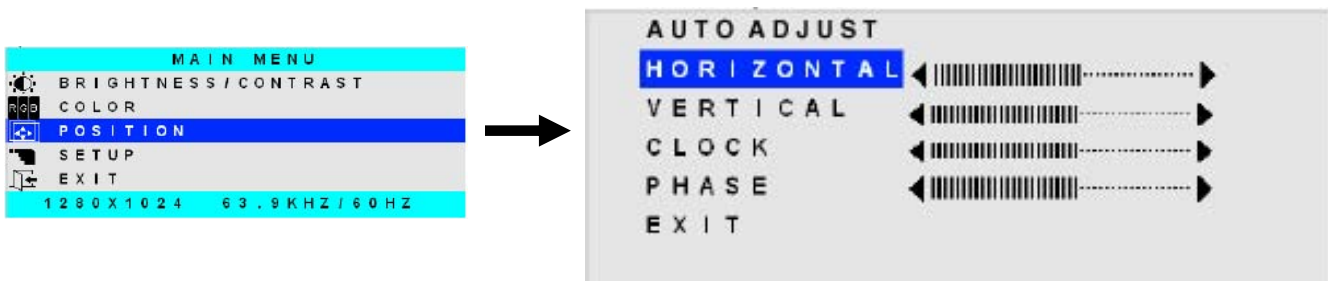

Setup Menu


Selecting the Setup menu will bring up a screen in which the user can adjust the following:

- OSD POSITION - the position of the OSD menus on the LCD display
- OSD TIME - the length of time the user can be idle before the OSD menu automatically exits (adjustable from 10 to 60 seconds)
- LANGUAGE - the language that the OSD menus will be presented in

With the item highlighted, (use the Up or Down arrow to move between them), press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting as needed. Select EXIT when finished to return to the Main Menu.



OSD Image can be moved to different points on the display

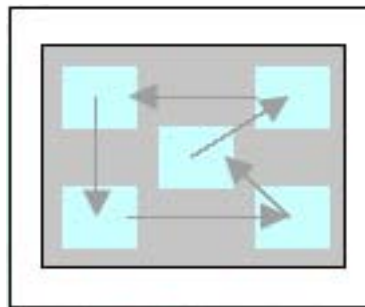

OSD Main Menu- DVI Monitor

Note: In order to display the OSD Menu, the RACKMUX must first be connected to a video source (see “Connect to a CPU” – page 4).


Note: If menu does not appear when the Menu button is pressed, the monitor may be set for a “PC” (VGA) input source. Press the Up Arrow button on the monitor to switch it to a “Digital” (DVI) input source.



Selection	Purpose	Range
Brightness/Contrast	Increase/decrease panel brightness/contrast level	1-100
Setup	<ul style="list-style-type: none"> • Control OSD Image position on screen • Set time OSD will stay on screen before auto shutoff • Select the language of the OSD menu • Select Input Source to display 	<ul style="list-style-type: none"> • 0-4 • 10 to 60 seconds • English, Spanish, Deutsch, Italian, or French • Digital or PC (<u>must</u> be set to Digital)
Exit	Exit from the OSD control menu	

Brightness/Contrast Menu

Selecting the Brightness/Contrast menu will bring up a screen in which the user can adjust the brightness and contrast levels of the LCD display. Using the Up or Down arrows to navigate the menu, highlight either the BRIGHTNESS or CONTRAST sections and press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting. Select EXIT when finished to return to the Main Menu.

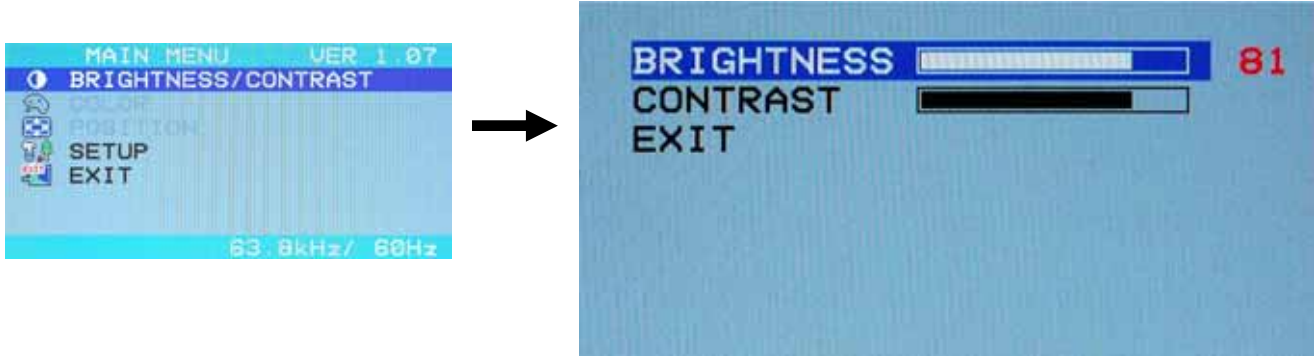


Setup Menu

Selecting the Setup menu will bring up a screen in which the user can adjust the following:


- OSD POSITION - the position of the OSD menus on the LCD display (positions 0-4)
- OSD TIME - the length of time the user can be idle before the OSD menu automatically exits (adjustable from 10 to 60 seconds)
- LANGUAGE - the language that the OSD menus will be presented in
- INPUT SOURCE - the type of signal that is coming from the CPU, either Digital (DVI) or PC (VGA)

NOTE: As used on RACKMUX with DVI option, the INPUT SOURCE must be set to "Digital".

With the item highlighted, (use the Up or Down arrow to move between them), press the Select button to choose the option to adjust. Then use the Up or Down Arrow to adjust the setting as needed. Select EXIT when finished to return to the Main Menu.

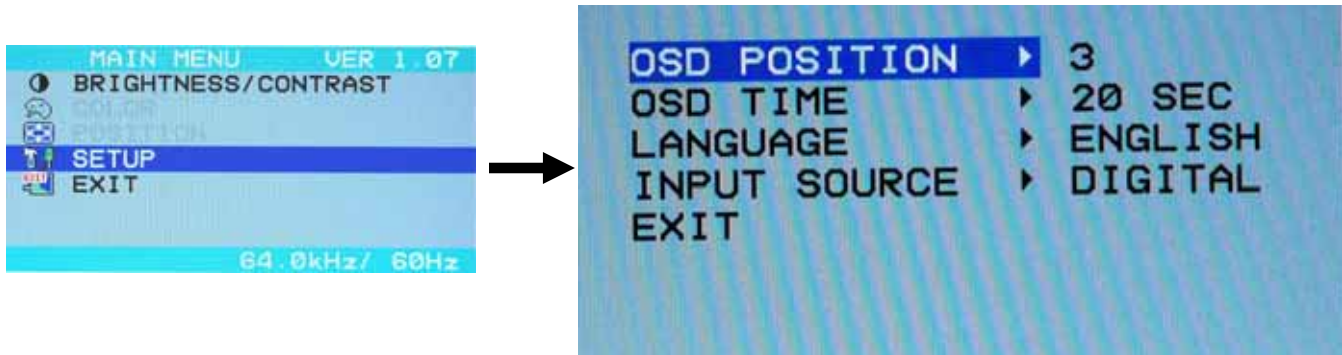

OSD Image can be moved to different points on the display

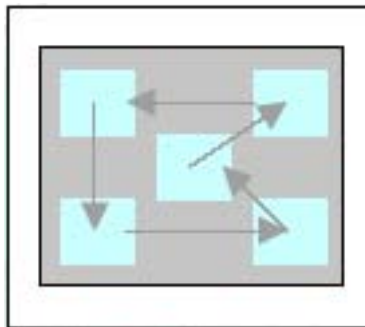

KEYBOARD FUNCTIONS

The main keyboard on the RACKMUX-VS17-T is a standard condensed Windows format. To reduce the keyboard size, some keys have been assigned multiple functions, accessible via the "Fn" key. This section will describe which keys have multiple functions and how to enable them. Use the LEDs to know what special features are enabled.

Function Key Operation

The Function ("Fn") key provides several special functions on the RACKMUX keyboard, including:

- enabling otherwise standard keyboard keys to be used as the keys of a numeric keypad
- enabling multi-function keys to change operation
- enabling the "P" key to perform the function of the SUN Power key

To turn ON (lock) the Function key, press the "Fn" key twice quickly (double-click). The "Fn" LED will illuminate.

To turn OFF (unlock) the Function key, press the "Fn" key twice quickly again. The "Fn" LED will turn OFF.

Note: The "Fn" key will also operate similar to the shift key (with only momentary effect). Press and hold the "Fn" key prior to pressing the special function key. The "Fn" key will remain active as long as it is depressed.

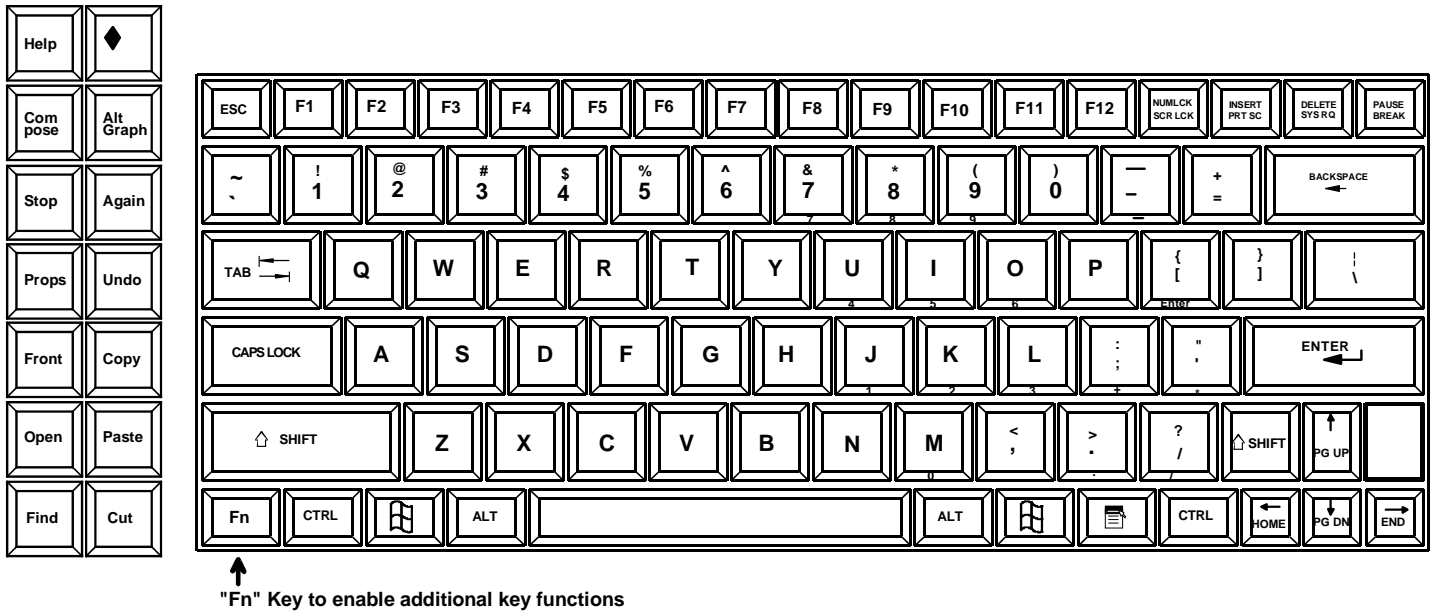


Figure 9- US (English) Keyboard Layout

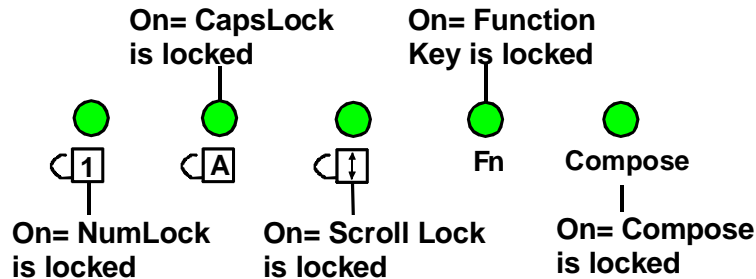



Figure 10- Keyboard LED Indications


Number Pad

The functionality of a Number Pad on a standard Windows keyboard has been incorporated into the keyboard of the RACKMUX-VS17-T (see Fig. 9, page 11).

To substitute the keys of the Number Pad:

1. Press the "NumLock" key. The NumLock LED () will illuminate.
2. Press the "Fn" key twice quickly (double-click). The "Fn" LED will illuminate.

To turn OFF Number Pad functions:

1. Press the "Fn" key twice quickly (double-click). The "Fn" LED will turn OFF.
2. Press the "NumLock" key. The NumLock LED () will turn OFF.

With the Fn and NumLock LEDs illuminated, pressing some standard keys will result in displaying characters as indicated in the chart below.

Standard Key	Displayed when NumLock is ON	Function when NumLock is OFF
j	1	End
k	2	Down Arrow
l	3	Page Down
u	4	Left Arrow
j	5	---
o	6	Right Arrow
7	7	Home
8	8	Up Arrow
9	9	Page Up
m	0	Insert
.	.	Delete
/	/	/
(forward slash)	(forward slash)	(forward slash)
;	+	+
(semicolon)	(plus sign)	(plus sign)
'	*	*
(apostrophe)	(asterisk)	(asterisk)
-	-	-
(hyphen)	(minus sign)	(minus sign)
[ENTER	ENTER
(left bracket)	ENTER	ENTER

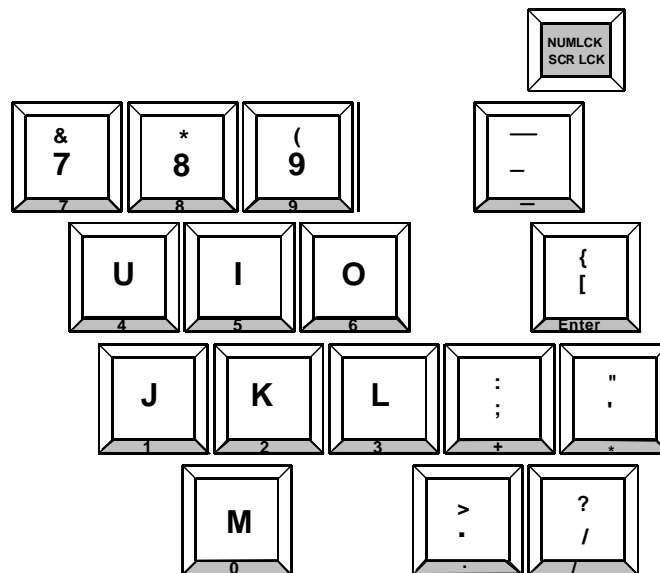


Figure 11- Keys of the Number Pad

Other Functions of the "Fn" Key

The Function ("Fn") key (page 11) will enable other standard keyboard features in addition to the Number Pad keys (page 12).

Key Function when Fn key is not locked ("Fn" LED is OFF)	Key Function when Fn key is Locked ("Fn" LED is ON)
Numlck (Number lock)	Scr Lck (Scroll Lock)
Insert	Prt Sc (Print Screen)
Delete	Sys Rq (System Requirements)
Pause	Break
Up Arrow	Page Up
Down Arrow	Page Down
Left Arrow	Home
Right Arrow	End

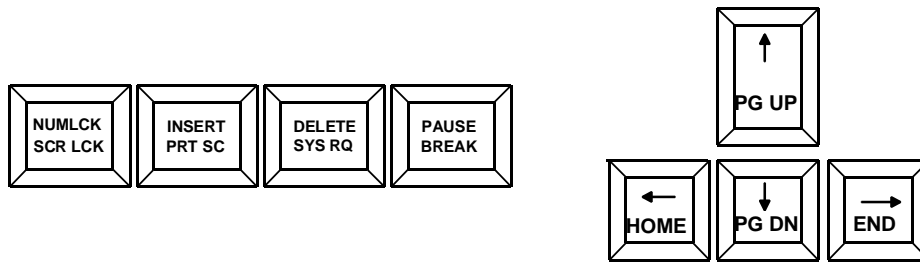


Figure 12- Additional multi-function keys

Note: The "Fn" key will also operate similar to the shift key (with only momentary effect).

Power Key

To perform the function of the SUN **Power key**, press the "P" while the "Fn" key is pressed or locked.

Numeric Keypad Option

Models with the Numeric Keypad option (-N) (i.e. RACKMUX-VS17-TN) have a standard Windows keyboard with 17-key numeric keypad.

Note: The “Fn” key is not an active key on this keyboard.

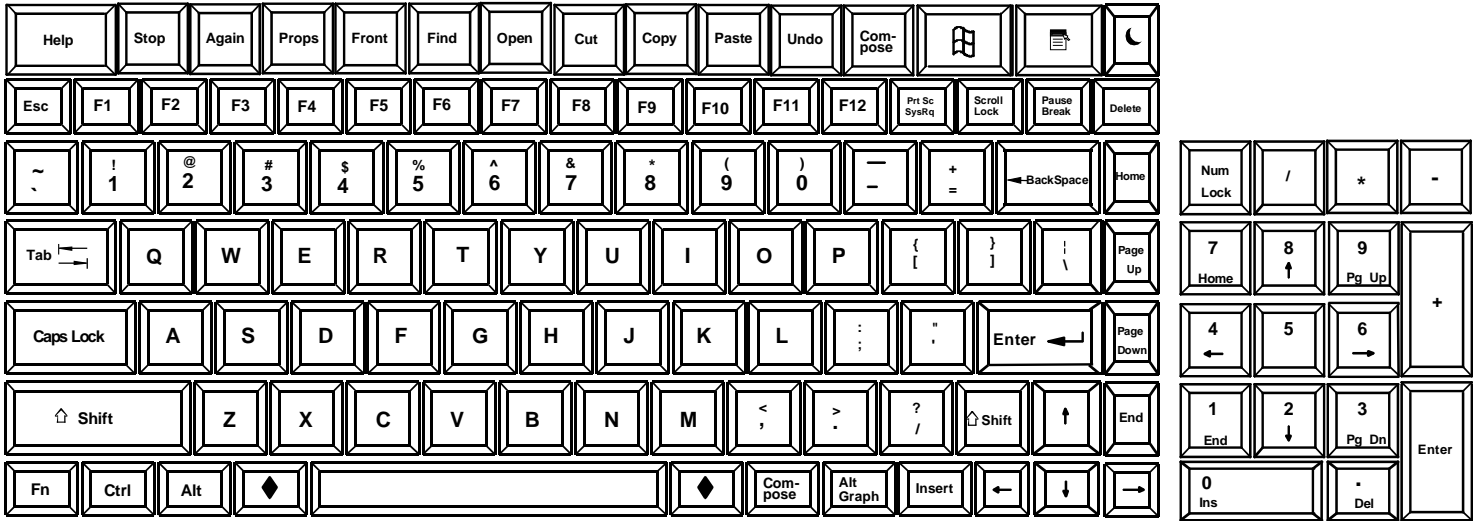


Figure 13- U.S. SUN Keyboard with numeric keypad

SAFETY

This NTI product has been designed and fully tested with user safety of the utmost importance. As with all electronic devices, this NTI product should be handled and operated with care. In order to avoid possible injury and to reduce any risk of damage to this product, please read and follow each of these safety instructions.

- Follow all instructions found in this manual.
- Follow all instructions found on the product.
- Do not attempt to perform any service on this product unless specifically instructed to in this manual.
- Objects that can damage or be spilled on this product should be kept away from this product. Liquids, if spilled, could come into contact with voltage points causing a risk of fire or electrical shock.
- Always unplug this product before cleaning it. Do not use any liquid or aerosol cleaners to clean it.
- Do not install or use this product near water
- Be sure to mount this product on a solid, stable surface or in a rack (if applicable)
- Route all cables and the power cord away from sharp edges or objects that could cause damage to them
- Use only the power cord or AC adapter that came with this unit or one that meets the requirements specified in this manual
- Use only a properly grounded 3-wire electrical outlet for power connection
- Unplug this product and contact NTI should any of the following conditions occur:
 - The power cord or connection cables have been damaged
 - The product has come into contact with any liquids
 - The product does not operate properly despite having followed all of the instructions
 - The product has been dropped or the case has been damaged in any way
 - The product performs distinctly different than it did when first put into service

RACKMUX-VS17 DRAWER STANDARD SPECIFICATIONS

General Specs

Case Material.....	Electro-galvanized steel black powdercoated
Dimensions WxDxH (in.).....	19 x 21.9 x 1.75
Supported Rack Depths.....	Adjustable 22" – 39"
Weight.....	26 lbs.
Input Power.....	AC 100-240V, 50 or 60 Hz
LCD (plus controller) Current Draw.....	12V Supply: 3.75A
Operating Temperature.....	0-40°C
Storage Temperature.....	-20-60°C
Relative Humidity.....	20-90%, non-condensing
Approvals.....	All parts comply with RoHS, CE

LCD

Display area.....	337.92mm (W) x 270.336 (H) (17 inch diagonal)
Panel Type.....	TFT Active
Number of Pixels.....	1280 (H) x 1024 (V)
Number of Colors.....	16.2 Million (6 bits + FRC)
Pixel Pitch.....	0.264(H) x 0.264(V)
Color Pixel Arrangement.....	RGB Vertical Stripe
Brightness.....	300cd/m ² (Nits)
Response Time.....	5.5ms
Viewing Angle.....	Horizontal: 140°; Vertical: 130° (Typ.)
Optimum Viewing Direction.....	6 o'clock
Backlight Unit.....	CCFL, 4 Tables, Edge-Light (2 Top/2 Bottom)
Operating Lamp Life.....	40,000 – 50,000 hrs
Contrast Ratio.....	500:1

Display Controller: VGA

Connector.....	15HD, female
Video Format.....	VGA, SVGA, XGA, SXGA
Signal Input (from Video Source.....	Analog RGB
Sync Range.....	H: 31 ~ 80KHz, V: 55 ~ 76Hz
OSD Control.....	Menu, Up, Down, Select, Power (5 keys)
Plug and Play.....	VESA DDC 2B Ver1.3

Display Controller: DVI

Connector.....	DVI-D, female
Video Format.....	VGA, SVGA, XGA, SXGA
Signal Input (from Video Source.....	Digital TMDS
Sync Range.....	H: 31 ~ 80KHz, V: 55 ~ 76Hz
OSD Control.....	Menu, Up, Down, Select, Power (5 keys)
Plug and Play.....	VESA DDC 2B Ver1.3

OSD Control Board

OSD Control.....	5 Keys
Power Key.....	Power ON/OFF
Menu Key.....	Activates Menu
Up, Down Keys.....	Navigation Control
Select Key.....	Select (when in Menu); Auto Adjust (not in menu)
LED.....	Indicates Operation Status
.....	Green = Power-ON, Video Input OK
.....	Red = Suspend / Stand-by, or Input Out of Range

Keyboard

No. Of Keys	83 Keys (US), 84 keys (UK, German, French, Italian, Spanish)+ 14 Sun keys
Key Switch Type	Membrane switch
Keytop Style	Rectangular Cylindrical
Operating Force	50gf +/- 25gf
Stroke	3.0mm +/- .5mm
Tactile	20 gf typ.
Height	8.5 mm
Operating Life	10M operations, minimum
Key Switch Bounce	10 ms, maximum
Supported Platforms	USB
CPU Connectors	USB Type B (USB);

Trackball

Casing Material	ABS
Ball Material	Phenolic (metal core)
Ball color	Black
Ball diameter	16mm
Tracking force	10 grams nominal
Resolution	117 pulse per ball revolution
Mounting Angle	Max. 30° to horizontal plane
Lifetime-Ball revolutions	>= 1 million
Mechanical Buttons	3 Mechanical switches are supported

Touchpad (option)

Motion Detection Method	capacitance sensing
X/Y Position Sensing Resolution	40 counts/mm
X/Y Position Reporting	Relative (Similar to mouse)
Tracking Speed	Up to 1016 mm/sec
Touch Force	No Contact pressure required
Lifetime (Plastic Overlay)	Minimum 10,000,000 strokes
Sample Rate	Up to 100 samples/sec

DC Power (option)

Input Power (DC)	36 – 72V
------------------------	----------

TROUBLESHOOTING

Each and every piece of every product produced by Network Technologies Inc is 100% tested to exacting specifications. We make every effort to insure trouble-free installation and operation of our products. If problems are experienced while installing this product, please look over the troubleshooting chart below to see if perhaps we can answer any questions that arise. If the answer is not found in the chart, please check the FAQs (Frequently Asked Questions) at our website at <http://www.networktechinc.com> or contact us directly for help at 1-800-742-8324 (800-RGB-TECH) in US & Canada or 1-330-562-7070 worldwide. We will be happy to assist in any way we can.

Problem/Message	Cause	Solution
"OUT OF FREQUENCY"	Input signal is outside the supported range	Lower video frequency to be within specified range
"POWER SAVER MODE"	The input signal is not present. This message will disappear after 5 seconds.	Check all cable connections- verify that they are secure
"NO SIGNAL"	<ul style="list-style-type: none"> The input signal is not present immediately after power ON. (DVI monitors only) monitor is in wrong mode 	<ul style="list-style-type: none"> Check all cable connections- verify that they are secure If monitor is DVI- input source may be set to "PC" (VGA) mode. Press Up Arrow on monitor to toggle mode to "Digital" (DVI) input source. (see also page 7)
"AUTO CONFIGURATION"	The LCD monitor is configuring itself for proper communication with the CPU.	No action is necessary.
Keyboard/trackball not functioning	USB cable is not properly connected	Check USB cable connection between the RACKMUX and the computer. Make sure it is connected to a working USB port at the CPU.
Front panel USB port is not working	USB cable is not properly connected	Check USB cable connection between the RACKMUX and the computer. Make sure it is connected to a working USB port at the CPU.
Keys pressed on the keyboard do not yield the expected result	"Fn" function is locked ON.	Check to see if the Fn LED is illuminated. If so, press the "Fn" key twice quickly to unlock the function.
LCD is not displaying image	<ul style="list-style-type: none"> Image out of range LCD Auto-Shut OFF button is depressed LCD is powered OFF 	<ul style="list-style-type: none"> Lower the resolution Make sure nothing is resting on the button Turn power to LCD ON

INDEX

accessory, 5
 Features and Functions, 2
 Fn key, 11, 13
 Function key, 11
 Keyboard LEDs, 11
 Number Pad, 12
 numeric keypad, 14

Options, 1
 OSD control buttons, 7
 OSD Menu-DVI, 9
 OSD Menu-VGA, 7
 Power Key- SUN, 13
 specifications, 16
 Telco mount, 4

WARRANTY INFORMATION

The warranty period on this product (parts and labor) is two (2) years from the date of purchase. Please contact Network Technologies Inc at (800) 742-8324 (800-RGB-TECH) or (330) 562-7070 or visit our website at <http://www.networktechinc.com> for information regarding repairs and/or returns. A return authorization number is required for all repairs/returns.