



**NETWORK
TECHNOLOGIES
INCORPORATED**

1275 Danner Dr Tel:330-562-7070
Aurora, OH 44202 Fax:330-562-1999
www.networktechinc.com

XTENDEX® Series

ST-C5RS-LC

RS232 EXTENDER

Installation and Operation Manual



**ST-C5RS-LC
RS232 Extender**

TRADEMARK

XTENDEX is a registered trademark of Network Technologies Inc in the U.S. and other countries.

COPYRIGHT

Copyright © 2003-2017 by Network Technologies Inc. All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written consent of Network Technologies Inc, 1275 Danner Drive, Aurora, Ohio 44202.

CHANGES

The material in this guide is for information only and is subject to change without notice. Network Technologies Inc reserves the right to make changes in the product design without reservation and without notification to its users.

Note: *Shielded CAT 5,5e, or 6 cable must be used to connect to LOCAL and REMOTE units in order to meet CE emission and immunity requirements.*

Note: *CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.*

WARNING: Outdoor or underground runs of CATX cable could be dangerous and will void the warranty.

WARNING: *The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.*

TABLE OF CONTENTS

| | |
|--|----------|
| Introduction | 1 |
| Materials | 1 |
| Features and Functions | 2 |
| Limitations | 3 |
| Preparation for Installation | 3 |
| Installation | 4 |
| Cable Connections | 4 |
| Plug-in and Boot Up..... | 5 |
| DIN Rail Mounting..... | 6 |
| Technical Specifications | 7 |
| Interconnection Cable Wiring Method | 7 |
| Warranty Information | 8 |

TABLE OF FIGURES

| | |
|---|---|
| Figure 1- Connect Local extender to CPU | 4 |
| Figure 2- Connect the Remote extender to the device | 4 |
| Figure 3- Connect CATx cable..... | 5 |
| Figure 4- Connect optional power supply..... | 5 |
| Figure 5- View looking into RJ45 female..... | 7 |

INTRODUCTION

The XTENDEX® RS232 Extender extends one RS232 serial device up to 3,935 feet (1,200 meters) over a single CAT5e/6/7 cable.

Features Include:

- Full duplex data communication.
- Compatible with all RS232 protocols.
- Sends RS232 data at 921.6 kbps up to 328 feet (100 meters) and 115.2 kbps up to 3,935 feet (1,200 meters).
- Supports Plug-n-Play specifications.
- Pure hardware design, no software or drivers required.
- DIN-rail mountable
- Ideal for many applications, including:
 - Extending serial touch screen monitors.
 - Transferring data or files between computers.

Power

- Supports self-powered devices.
- Powered by attached devices through DB9 serial cable.
- If additional power is required, a 9-30VDC power supply can be wired to the screw terminal pair (sold separately).

Regulatory Approvals

- CE, FCC, RoHS

MATERIALS


Materials supplied with ST-C5RS-LC:

- ✓ NTI XTENDEX RS232 Extender- Master and Slave Unit
- ✓ 2- DIN Rail mounting clips with screws
- ✓ One 6-inch DB9 male-to-male null modem serial cable

Note: *Shielded CAT5e,6 or 7 cable must be used to connect to LOCAL and REMOTE units in order to meet CE emission requirements.*

Contact your nearest NTI distributor or NTI directly for all of your KVM needs at 800-RGB-TECH (800-742-8324) in US & Canada or 330-562-7070 (Worldwide) or at our website at <http://www.networktechinc.com> and we will be happy to be of assistance.

FEATURES AND FUNCTIONS

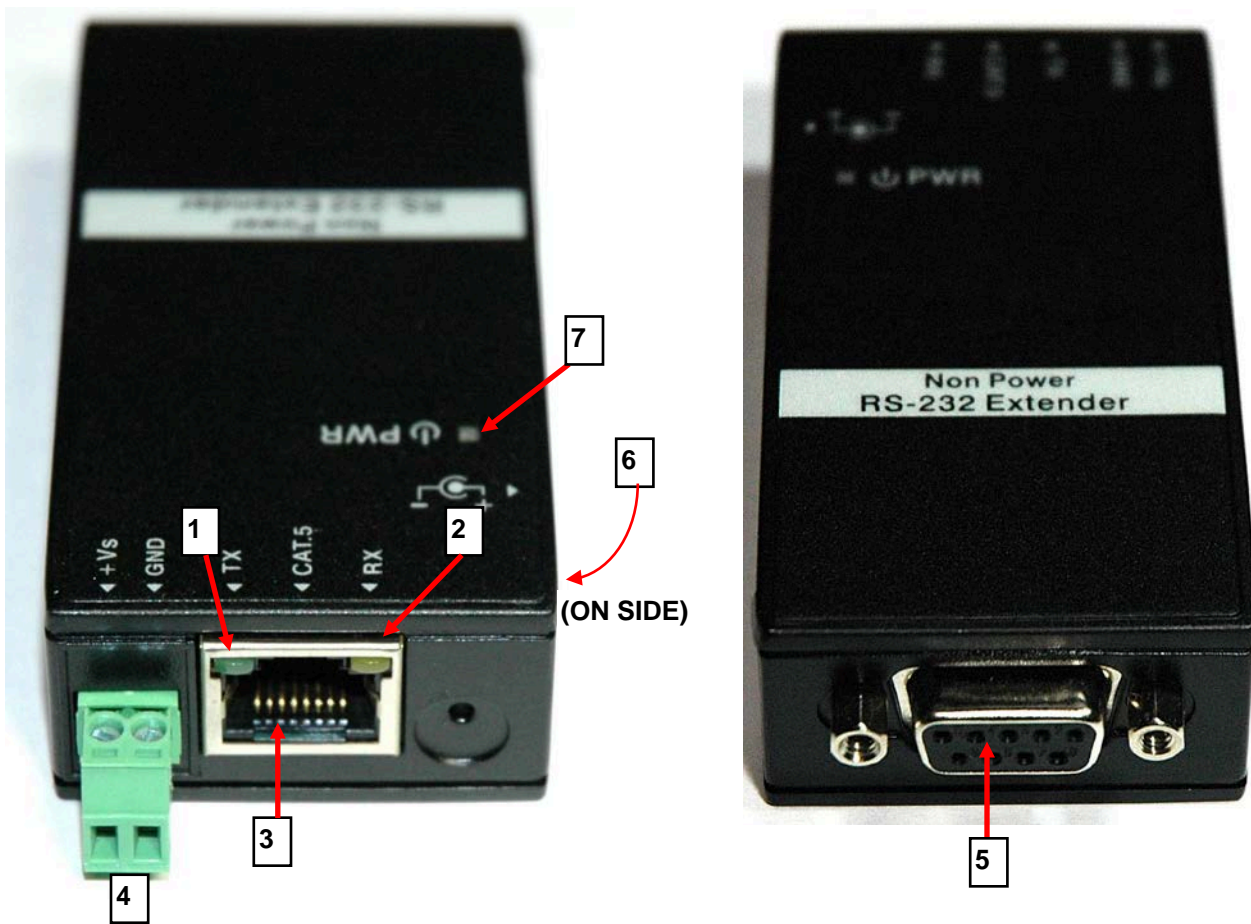

1. Green "Tx" LED- flashes when data is being transferred
2. Yellow "Rx" LED- flashes when data is being received
3. CAT5- RJ45 female- for connecting the CAT5e/6/7 cable
4. Terminal Block- for connecting 9-30VDC power supply if required (optional- sold separately)
5. RS232 Connector- 9D female- for connecting to the RS232 port on the CPU (Master Unit) or serial device (Slave Unit)
6. PWR- connection jack for an AC adapter (3.5x1.3mm DC Plug)- another alternate power connection method
7. LED- Illuminates red when power has been supplied to the extender

LIMITATIONS

- Hot-plugging of devices is supported provided devices were originally connected at power-up.
- The extender supports all baud rates up to 115,200 baud up to 3,935 feet (1,200 meters) or 921,600 baud up to 328 feet (100 meters) and the attached CPU must be configured accordingly.

PREPARATION FOR INSTALLATION

- Locations should be chosen for the serially-controlled device and CPU that also has space to connect the Master and Slave Units within the distance provided by the cables.
- The CATX cables must be run to the locations where the Master and Slave Units will be connected. Be careful to route the cables away from any sources of magnetic fields or electrical interference that might reduce the quality of the video signal (i.e. AC motors, welding equipment, etc.).
- All cables should be installed in such a way that they do not cause stress on their connections to the equipment. Extended lengths of cable hanging from a connection may interfere with the quality of that connection. Secure cables as needed to minimize this.
- Properly shut down and disconnect the power from the CPU and serial device to be separated. If other equipment is involved whose connections are being interrupted, be sure to refer to the instruction manuals for that equipment for proper disconnection and re-connection procedures before proceeding.
- Master and Slave units should be grounded through either a serial device or CPU that uses a 3-prong power cord. If only one unit is grounded, shielded CAT5 cable should be used.

Note: *CATX connection cable used between NTI XTENDEX Series Master and Slave or any XTENDEX Series products should not be run underground, outdoors or between buildings.*

WARNING: Outdoor or underground runs of CATX cable could be dangerous and will void the warranty.

INSTALLATION

Cable Connections

1. Connect a DINT-xx cable (9DB male to 9DB female wired straight through, pin-to-pin) cable between the DB9 connector on the Master (see label on back of extender) and the serial port on the back of the CPU (or other serial controlling device).

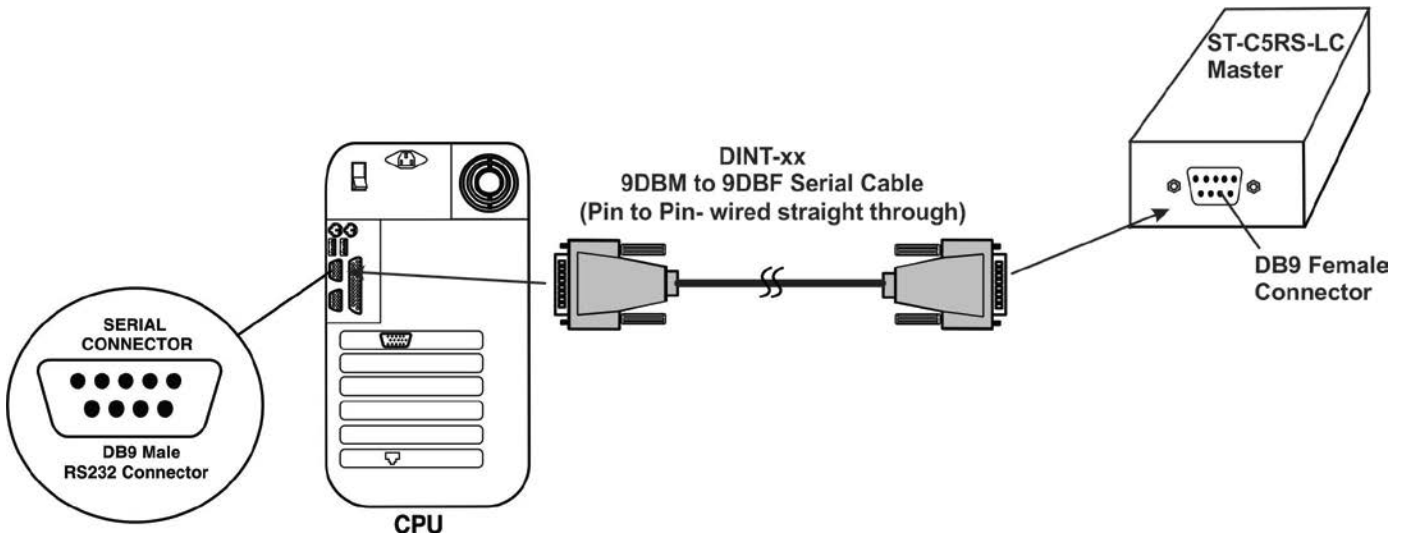


Figure 1- Connect Local extender to CPU

2. Connect the supplied 6 inch 9DB male to 9DB male null serial cable between the Slave (see label on back of extender) and your self-powered serially-controlled device.

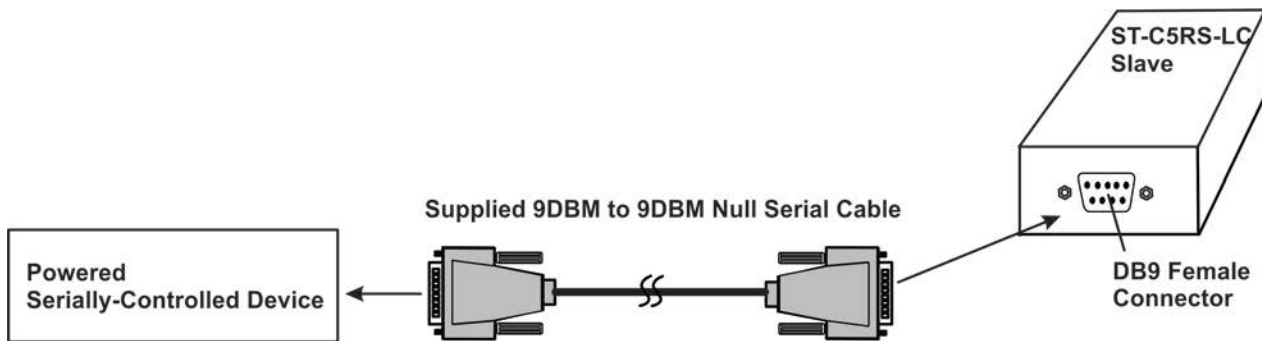


Figure 2- Connect the Remote extender to the device

3. Connect a CAT5e/6/7 cable between the Master and Slave units. For devices controlled by up to 115,200 baud rate, this cable can be up to 3935 feet in length (1200 meters). For devices controlled by higher baud rates (up to 921,600), this cable can be up to 328 feet in length (100 meters).

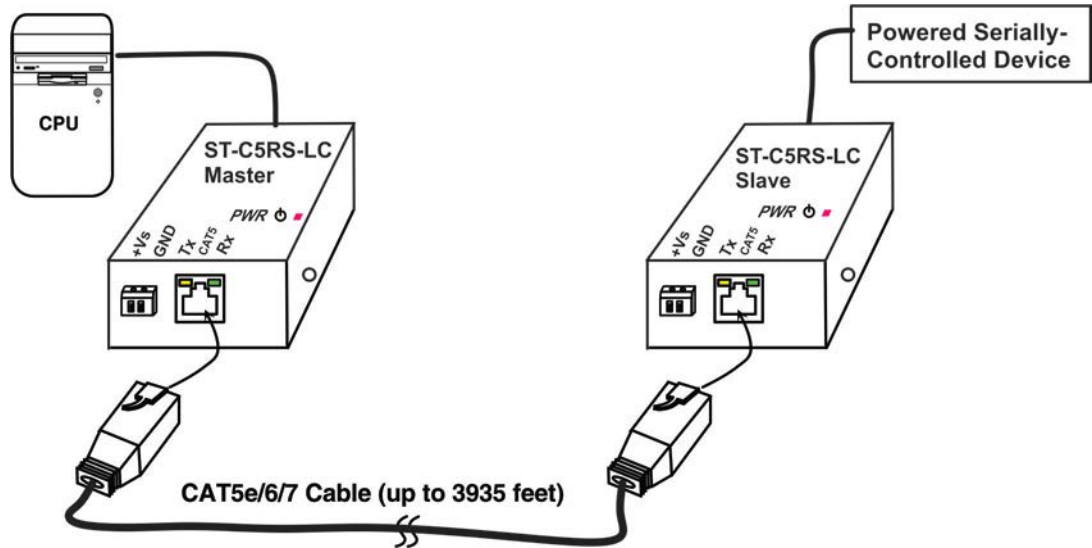


Figure 3- Connect CATx cable

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a Crossover Cable will damage the extender and void your warranty.

Plug-in and Boot Up

1. Power up the CPU and extended device. The red power LED on each extender should illuminate. Try sending communication between the CPU and the serially-controlled device. The CPU and device should each react as if they were directly connected to each other.

Note: The yellow ("Tx") and green ("Rx") LEDs on each RJ45 connector will flash anytime data traffic is passing between the Master and Slave, indicating proper CATx cable connection and communication.

If insufficient power is provided by the connection to the CPU or the serial device, the red power LED will not illuminate. In this case, an external power supply (9-30VDC) will need to be connected (sold separately- contact NTI).

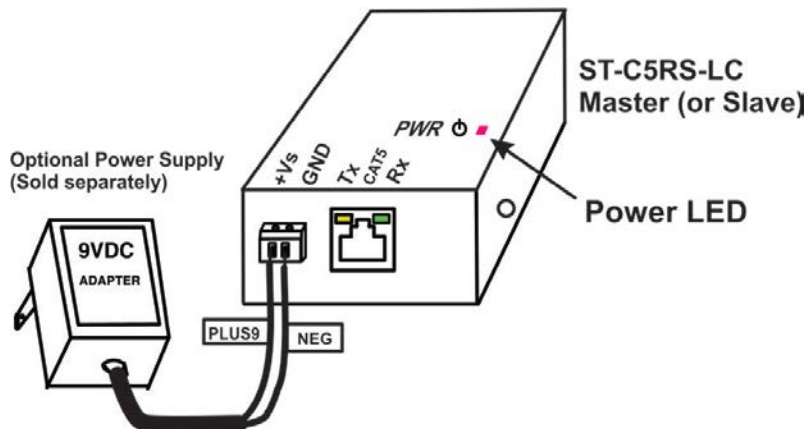




Figure 4- Connect optional power supply

DIN Rail Mounting

The extenders can be easily DIN rail mounted with the provided DIN rail mounting clips. Connect the clip to the extender using the two holes on the back of the extender (screws are provided).



Then set the extender on the rail against the spring clips side first, apply a small amount of pressure and rotate the extender up to lock the rail into the top of the clip. (See images below.) Release the extender to fully engage the clip on the rail.

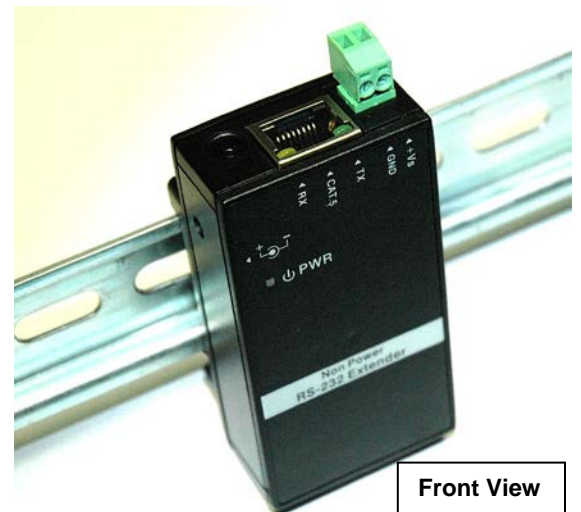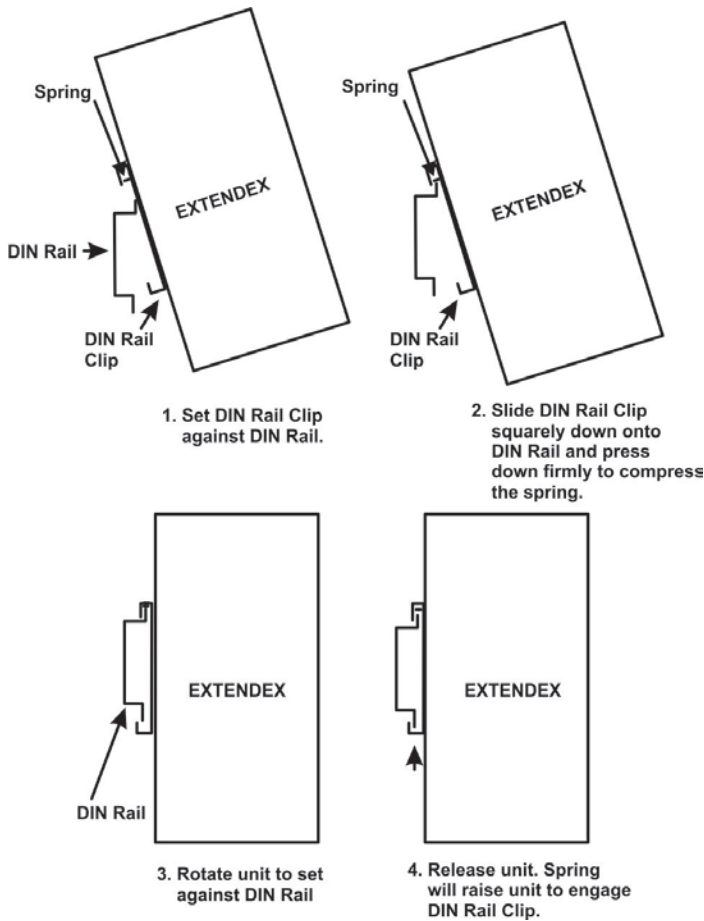

TECHNICAL SPECIFICATIONS

| | |
|--|--|
| RS232 Connectors | 9DB female |
| RS232 Baud Rate | 115,200 to 3935 feet (1200 meters) 921,600 to 328 feet (100 meters) |
| RS232 Compatibility | RXD,TXD,RTS,CTS |
| Communication Mode | Full Duplex Data |
| RS232 protocols supported | All |
| Interconnect Cable | CAT5e/6/7 straight through cable for EIA/TIA 568 B wiring terminated w/ male RJ45 connectors |
| Remote and Local Unit Power | device powered through 9DB cable Optional: 9-30VDC adapter (if needed) |
| Power Consumption | 40mA / 360mW |
| Operating Temperature | -30°C to 75°C |
| Operating humidity | 5 - 95% Non-Condensing |
| Dimensions WxDxH (In.) (Local or Remote) | 1.63x3.13x0.88 |
| Drivers required | none |
| Regulatory Approvals | CE,FCC,RoHS |

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.

INTERCONNECTION CABLE WIRING METHOD

The connection cable between the Remote and Local is terminated with RJ45 connectors and must be wired according to the EIA/TIA 568 B industry standard. Wiring is as per the table and drawing below.

| Pin | Wire Color | Pair | Function |
|-----|--------------|------|----------|
| 1 | White/Orange | 2 | T |
| 2 | Orange | 2 | R |
| 3 | White/Green | 3 | T |
| 4 | Blue | 1 | R |
| 5 | White/Blue | 1 | T |
| 6 | Green | 3 | R |
| 7 | White/Brown | 4 | T |
| 8 | Brown | 4 | R |


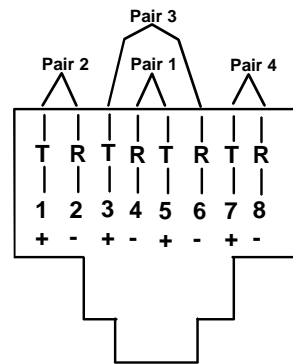


Figure 5- View looking into RJ45 female

9DB Female on Extender

| Pin | Function |
|-----|----------|
| 1 | N/U |
| 2 | TXD |
| 3 | RXD |
| 4 | N/U |
| 5 | GND |
| 6 | N/U |
| 7 | CTS |
| 8 | RTS |
| 9 | N/U |

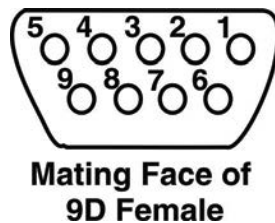


Mating Face of 9D Female

N/U = Not Used

9DB Male to 9DB Male Null Serial Cable Pin Assignments

| 9DBM | Signal | | 9DBM | Signal |
|------|--------|---------------|------|--------|
| 1 | --- | Not connected | 1 | --- |
| 2 | TXD | Connected to | 3 | RXD |
| 3 | RXD | | 2 | TXD |
| 4 | ---- | Not connected | 4 | ---- |
| 5 | GND | Connected to | 5 | GND |
| 6 | --- | Not Connected | 6 | ---- |
| 7 | CTS | Connected to | 8 | RTS |
| 8 | RTS | | 7 | CTS |
| 9 | --- | Not Connected | --- | ---- |

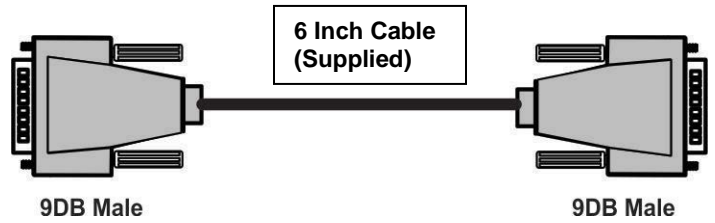

WARRANTY INFORMATION

The warranty period on this product (parts and labor) is two (2) years from the date of purchase. Please contact Network Technologies Inc at **(800) 742-8324** (800-RGB-TECH) or **(330) 562-7070** or visit our website at <http://www.networktechinc.com> for information regarding repairs and/or returns. A return authorization number is required for all repairs/returns.

Note: CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products should not be run underground, outdoors or between buildings.

WARNING: Outdoor or underground runs of CATx cable could be dangerous and will void the warranty.

WARNING: The CATx connection cable used between NTI XTENDEX Series Local and Remote or any XTENDEX Series products must be wired straight through (pin 1 to pin 1, pin 2 to pin 2, etc.) The use of a CROSSOVER CABLE will damage the extender and void your warranty.