

# SPLITMUX-4X4-HDVWC

## 4x4 HDMI Multiviewer / Video Matrix Switch / Video Wall Processor

### Installation and Operation Manual



# 4x4 HDMI Multiviewer/Video Matrix Switch/Video Wall Processor

This SPLITMUX-4X4-HDVWC is the perfect solution for displaying content from up to four sources on four HDTV displays. Each of the sources can be individually scaled. Seamless switching ensures no frame loss during picture transitions. Eight preset buttons allow the user to store and recall custom-configured routing presets. Build in OSD menu simplifies system configuration. The SPLITMUX-4X4-HDVWC is a great solution for small and large commercial venues that require content from four sources displayed on four displays instantly and without any loss of picture.

## Features:

- Input and Output resolutions up to 1080p Full HD and 1920x1200 (WUXGA)
- Support LPCM7.1 @ 192KHz, Dolby True HD, DTS-HD MA
- HDMI1.3, DVI1.0, and HDCP 1.4 compliant
- Video-Wall mode supports 2 x 2 Video-Wall with 4 selectable input sources
- Support 4 input and 4 multiview windows seamless switching
- Multiview mode support scales and sizes each picture.
- Multiview mode support PIP, POP and set PIP priority
- Support panel button, IR remote, RS232, Web GUI and APP control
- Support OSD menu setting
- Field-upgradable firmware for both web server and RS232.

## Application View:

### MULTIVIEW MODE




# MATRIX MODE




# VIDEO WALL MODE



# Panel View :

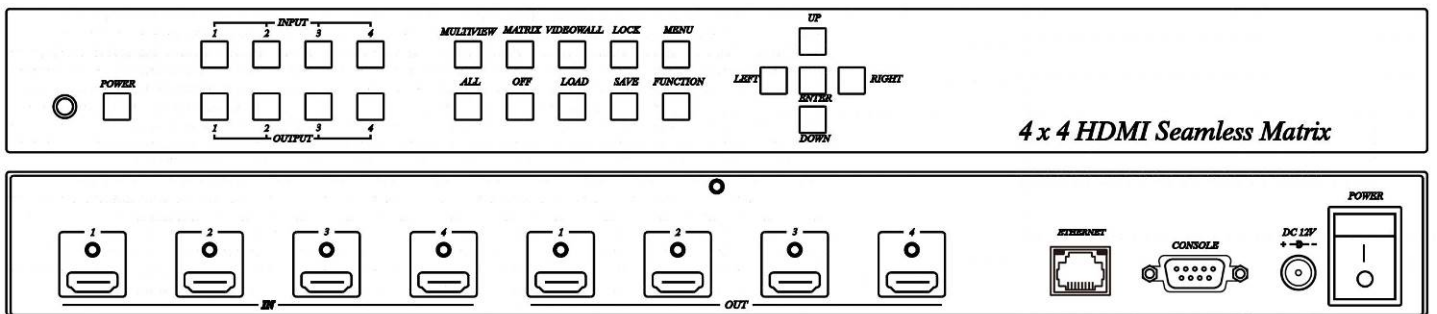

## Front Panel Function:

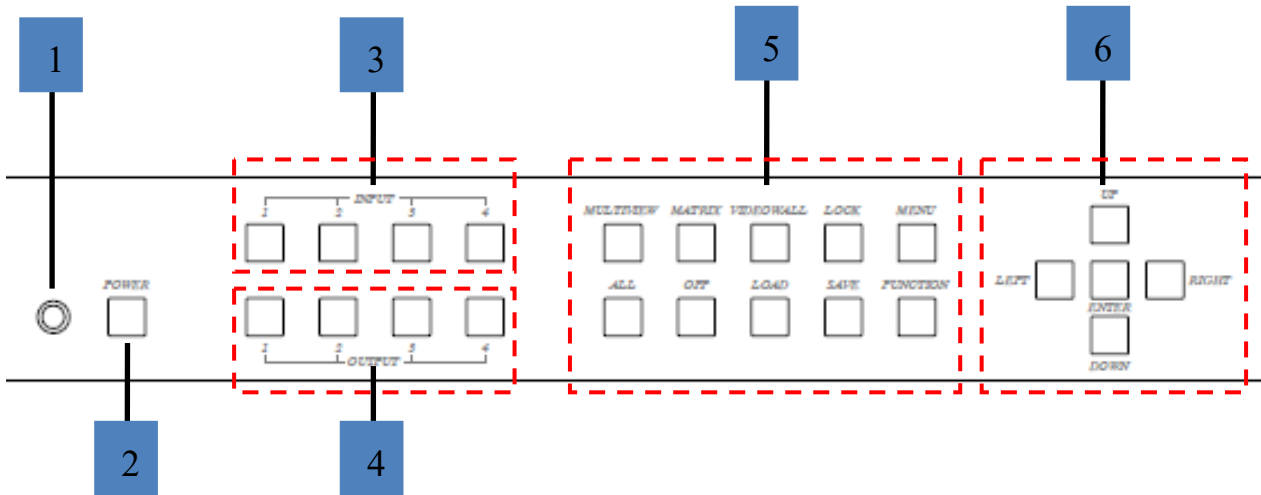

## Panel Button Function:

No.	Function Name	Description
1	IR	Receiving IR remote signal
2	POWER	Power on / standby
3	INPUT 1~4	Press these buttons to select the desired input
4	OUTPUT 1~4	Press these buttons to select the desired output (not available for videowall mode)
5	MULTIVIEW	Enter Multiview mode (All output display same screen)
	MATRIX	Enter Matrix mode
	VIDEOWALL	Enter videowall mode
	LOCK	Use this button to lock / unlock panel button and prevent accidental changes.
	MENU	<ul style="list-style-type: none"> <li>● Enter OSD menu (only viewed at Monitor connected to Output 1)</li> <li>● Back to upper level of menu</li> </ul>
	ALL	Select all output (not available for videowall mode )
	OFF	Turn off the selected output (not available for videowall mode )
	LOAD	<ul style="list-style-type: none"> <li>● Load layout/source in Multiview and Matrix mode from scene 1~8</li> <li>● Load screen position in VIDEOWALL mode from scene 1~4</li> </ul>
	SAVE	<ul style="list-style-type: none"> <li>● Save current layout/source in Multiview and Matrix mode to scene 1~8</li> <li>● Save screen position in VIDEOWALL mode to scene 2~4</li> </ul>
	FUNCTION	<ul style="list-style-type: none"> <li>● Switch different PIP/POP layout in Multiview Mode</li> <li>● Bezel correction (adjust screen position) in VIDEOWALL MODE</li> <li>● Not available in MATRIX MODE</li> </ul>
6	UP	<ul style="list-style-type: none"> <li>● Move menu function up in OSD</li> <li>● Move screen position up in videowall mode.</li> </ul>
	DOWN	<ul style="list-style-type: none"> <li>● Move menu function down in OSD</li> <li>● Move screen position down in videowall mode.</li> </ul>
	LEFT	<ul style="list-style-type: none"> <li>● Move menu function left in OSD</li> <li>● Move screen position left in videowall mode.</li> </ul>
	RIGHT	<ul style="list-style-type: none"> <li>● Move menu function right in OSD</li> <li>● Move screen position right in videowall mode.</li> </ul>
	ENTER	Execution selected function

## Operating:

### Multiview mode:

#### Output/input selection:

1. Press OUTPUT 1~4 buttons to select the desired output windows (A~D), button LED will light on. You could select multiple outputs at the same time.
2. Press INPUT 1~4 buttons to switch to desired input
3. Press ENTER to quit the input selection.

#### Window layout selection:

1. Press FUNCTION button to enter layout selection.
2. Press INPUT /OUTPUT 1~4 to select desired layout, total 8 sets.
3. Press ENTER to quit the layout selection.

#### Save scene:

1. Press SAVE button.
2. Press INPUT /OUTPUT 1~4 to save current windows layout and source of windows.
3. Press ENTER to confirm.

#### Load scene:

1. Press LOAD button.
2. Press INPUT /OUTPUT 1~4 to load saved layout/source.
3. Press ENTER to confirm.

### Matrix mode:

#### Output/input selection:

1. Press OUTPUT 1~4 buttons to select the desired output monitor, button LED will light on. You could select multiple OUTPUT at the same time.
2. Press INPUT 1~4 buttons to switch to desired input
3. Press ENTER to quit the input selection.

#### Save scene:

1. Press SAVE button.
2. Press INPUT /OUTPUT 1~4 to save current source of output.
3. Press ENTER to confirm.

#### Load scene:

1. Press LOAD button.
2. Press INPUT /OUTPUT 1~4 to load saved output/source, total 8 sets.
3. Press ENTER to confirm.

**Note: This SPLITMUX can work in Multiview mode or Matrix mode, but not both at the same time.**

### Videowall mode:

#### Input selection:

1. Press INPUT 1~4 buttons to switch to desired input

#### Bezel correction:

1. Press FUNCTION button.
2. Press OUTPUT 1~4 to select the monitor to adjust screen position, shift depends on output resolution.
3. Press INPUT 1~4 to select the monitor to adjust screen position, shift depends on input resolution.
4. Press UP, DOWN, LEFT or RIGHT button to shift the screen.
5. Press ENTER to quit the position adjustment.


#### Save scene:

1. Press SAVE button.
2. Press INPUT 2~4 to save current position of each screen.
3. Press ENTER to confirm.

#### Load scene:

1. Press LOAD button.
2. Press INPUT 1~4 to load saved position of each screen(1 is factory default), total 4 sets.
3. Press ENTER to confirm.

## Rear Panel Function:

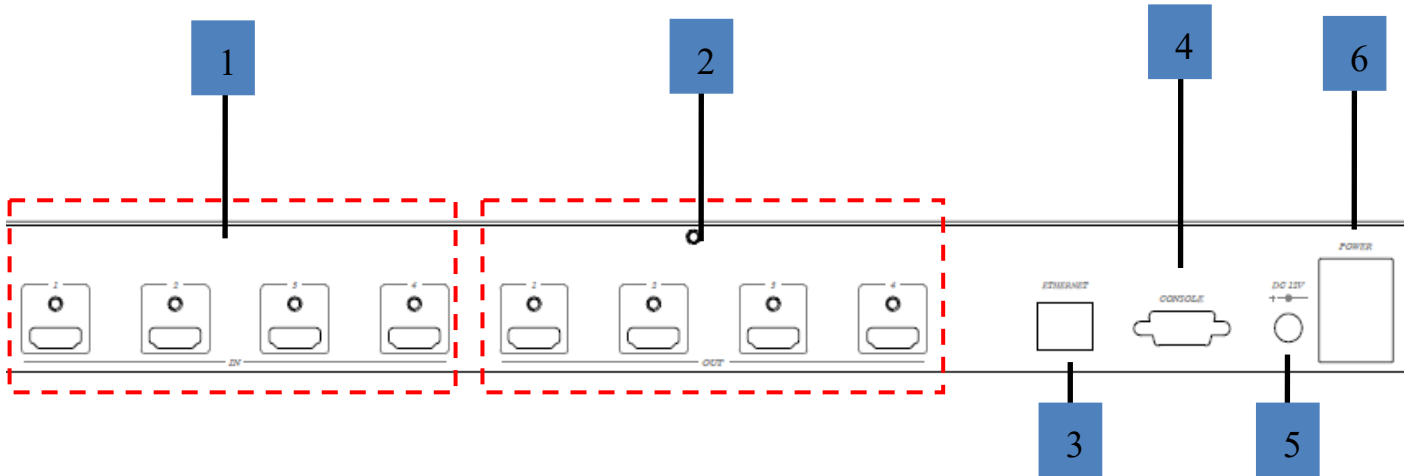



## Panel Connector Function:

No.	Name	Description
1	INPUT 1~4	HDMI Input 1~4
2	OUTPUT 1~4	HDMI Output 1~4
3	ETHERNET	Yellow LED: Link Green LED: Data transmit/receive WebGUI control / Web firmware update
4	RS232	RS232 control / firmware update
5	DC12V	External power supply
6	I/O	I: Power on O: Power off






















## IR Remote Control (IR01) :

Initial at first time use the remote control or after change battery of remote control, the IR remote control and the equipment IR Remote ID must be using same. The default IR Remote ID is 0.

To setting the Remote ID, Press and hold power button, then press button 0 to complete the setting. + (for example)



### Remote Control Button Function:

Symbol	Function Name	Description
	POWER	Power on / standby
	UP	Move menu function up in OSD
	DOWN	Move menu function down in OSD
	LEFT	Move menu function left in OSD
	RIGHT	Move menu function right in OSD
	ENTER	Execution selected function
	MENU	<ul style="list-style-type: none"> <li>● Enter OSD menu (only viewed on Monitor at Output 1)</li> <li>● Back to upper level of menu</li> </ul>
	Quick output/input selection	<ul style="list-style-type: none"> <li>● Press to select output 1</li> <li>● Switch to input 1 if output have been selected</li> </ul>
	Quick output/input selection	<ul style="list-style-type: none"> <li>● Press to select output 2</li> <li>● Switch to input 2 if output have been selected</li> </ul>
	Quick output/input selection	<ul style="list-style-type: none"> <li>● Press to select output 3</li> <li>● Switch to input 3 if output have been selected</li> </ul>
	Quick output/input selection	<ul style="list-style-type: none"> <li>● Press to select output 4</li> <li>● Switch to input 4 if output have been selected</li> </ul>
	Reserved	
	Reserved	
	Multiview	Switch to Multiview Mode
	Matrix	Switch to Matrix mode
	Videowall	Switch to Videowall mode
	Turn off video	Turn off video if output have been selected
	Reserved	
	Reserved	
	Reserved	
	Reserved	

## OSD MENU :

MAIN	SUB MENU	DESCRIPTION		
SETUP	OUTPUT RESULTION	480P	1366x768	
		576P	1440x900	
		720P50	1600x1200	
		720P60	1680x1050	
		1080P24	1920x1200	
		1080P50	BACK	
		<b>1080P60, Default</b>	EXIT	
		1024x768		
		1280x800		
		1280x1024		
	PICTURE SETTING	OUT SELECT	OUT1~OUT4, <b>Default OUT1</b>	
		CONTRAST	0~100, Default 50	
		BRIGHTNESS	0~100, Default 50	
		SATURATION	0~100, Default 50	
		HUE	0~100, Default 50	
		RESET		
		BACK		
		EXIT		
	OSD SETTING	MENU TIMEOUT	0~100, <b>Default 20</b>	
		INFO TIMEOUT	0~100, <b>Default 5</b>	
		INFO POSITION	RIGHT TOP	
			<b>LEFT TOP , Default</b>	
			RIGHT BUTTON	
			LEFT BUTTON	
		INFO DISPLAY	ON, OFF, <b>Default ON</b>	
		BACK		
		EXIT		
	EDID	INPUT1 EDID	<b>1080P 2CH, Default</b>	
			1080P MLT	
			OUTPUT 1	
			OUTPUT 2	
			OUTPUT 3	
			OUTPUT 4	
INPUT2 EDID		<b>1080P 2CH, Default</b>		
		1080P MLT		
		OUTPUT 1		
		OUTPUT 2		
		OUTPUT 3		
		OUTPUT 4		



		INPUT3 EDID	<b>1080P 2CH, Default</b>	
			1080P MLT	
			OUTPUT 1	
			OUTPUT 2	
			OUTPUT 3	
			OUTPUT 4	
		INPUT4 EDID	<b>1080P 2CH, Default</b>	
			1080P MLT	
			OUTPUT 1	
			OUTPUT 2	
			OUTPUT 3	
			OUTPUT 4	
		INPUT ALL	<b>1080P 2CH, Default</b>	
			1080P MLT	
			OUTPUT 1	
	OUTPUT 2			
	OUTPUT 3			
	OUTPUT 4			
	BACK			
	EXIT			
	HDCP	HDCP	<b>FOLLOW INPUT, Default</b>	
ALWAYS ON				
BACK				
EXIT				
AUDIO	MULTIVIEW MODE	OUTPUT1 AUDIO	<b>IN 1, Default</b>	
			IN 2	
			IN 3	
			IN 4	
			OFF	
		OUTPUT 2 AUDIO	IN 1	
			<b>IN 2, Default</b>	
			IN 3	
			IN 4	
			OFF	
		OUTPUT 3 AUDIO	IN 1	
			IN 2	
			<b>IN 3, Default</b>	
			IN 4	
			OFF	
		OUTPUT 4 AUDIO	IN 1	
IN 2				

				IN 3	
				<b>IN 4, Default</b>	
				OFF	
			BACK		
			EXIT		
			MATRIX MODE	OUTPUT 1 AUDIO	IN 1
					IN 2
		IN 3			
		IN 4			
		<b>FOLLOW, Default</b>			
		OFF			
		OUTPUT 2 AUDIO		IN 1	
				IN 2	
				IN 3	
				IN 4	
				<b>FOLLOW, Default</b>	
				OFF	
		OUTPUT 3 AUDIO		IN 1	
				IN 2	
				IN 3	
				IN 4	
				<b>FOLLOW, Default</b>	
				OFF	
		OUTPUT 4 AUDIO		IN 1	
				IN 2	
			IN 3		
			IN 4		
<b>FOLLOW, Default</b>					
OFF					
BACK					
EXIT					
VIDEO WALL	OUTPUT 1 AUDIO	IN 1			
		IN 2			
		IN 3			
		IN 4			
		<b>FOLLOW, Default</b>			
		OFF			
	OUTPUT 2 AUDIO	IN 1			
		IN 2			
		IN 3			
		IN 4			

				<b>FOLLOW, Default</b>	
				OFF	
				OUTPUT 3 AUDIO	IN 1
				IN 2	
				IN 3	
				IN 4	
				<b>FOLLOW, Default</b>	
				OFF	
				OUTPUT 4 AUDIO	IN 1
				IN 2	
				IN 3	
				IN 4	
				<b>FOLLOW, Default</b>	
				OFF	
BACK					
EXIT					
BACK					
EXIT					
BACK					
EXIT					
NETWORK	IP ADDRESS	BYTE 1	192		
		BYTE 2	168		
		BYTE 3	0		
		BYTE 4	200		
		BACK			
		EXIT			
	SUBNET MASK	BYTE 1	255		
		BYTE 2	255		
		BYTE 3	255		
		BYTE 4	0		
		BACK			
		EXIT			
	GATEWAY IP	BYTE 1	192		
		BYTE 2	168		
		BYTE 3	0		
		BYTE 4	1		
		BACK			
		EXIT			
	DHCP CLIENT	DHCP CLIENT	ON		
			<b>OFF, Default</b>		
		BACK			

		EXIT	
	MEDIA TYPE	MEDIA TYPE	10M
			100M
			<b>AUTO, Default</b>
		BACK	
		EXIT	
	MAC FILTER	MAC FILTER	ON
			<b>OFF, Default</b>
		BACK	
		EXIT	
	BACK		
	EXIT		
SYSTEM	DEVICE ID	DEVICE ID	0~99, <b>Default 0</b>
		BACK	
		EXIT	
	REMOTE ID	REMOTE ID	0~9, <b>Default 0</b>
		BACK	
		EXIT	
	FACTORY DEFAULT	FACTORY DEFAULT	
	REBOOT	REBOOT	
	INFORMATION	FIRMARE V1.00	
		WEB	V1.0
	BACK		
EXIT			
EXIT			


## WebGUI Control:

### Initial IP Configuration

1. Setup host IP Address same as your PC with same subnet. **(Default 192.168.0.200)**  
To change IP Address please enter OSD menu by panel button or IR remote control.
2. Enter IP Address in your web browser and you could link to the web page of host.
3. Browser support: Internet Explorer 9, Chrome 42.0.2311.135 m, Firefox 31.0 and higher

WebGUI Operating:

### LOGIN:

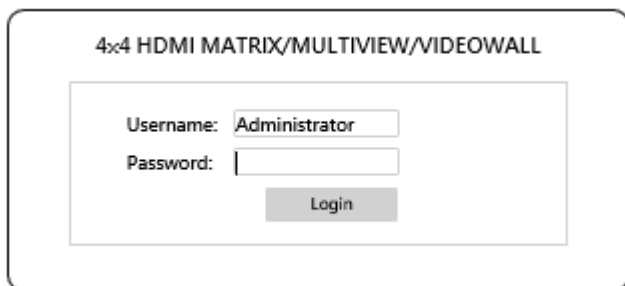

4x4 HDMI MATRIX/MULTIVIEW/VIDEOWALL


Username: Administrator

Password:

Login

- USERNAME : admin
- PASSWORD : 123

### MAIN PAGE:

ROUTING SETUP NETWORK SYSTEM ADVANCE POWER STATUS: ON  LOG OUT


- ROUTING : Include MULTIVIEW, MATRIX, VIDEOWALL three mode
- SETUP : OUTPUT RESOLUTION, HDCP SETTING, ID SETTING, PICTURE SETTING, OSD SETTING
- NETWORK : IP ADDRESS, SUBNET MASK GATEWAY, DHCP CLIENT, MEDIA TYPE, MAC FILTER
- SYSTEM : change password
- ADVANCE : Adjust user define layout of MULTIVIEW mode

# Multiview

4x4 HDMI MATRIX/MULTIVIEW/VIDEOWALL

**Note: This SPLITMUX can work in Multiview mode or Matrix mode, but not both at the same time.**

- VIDEO SETTING : Select video source of window A~D to input 1~4 or off
- AUDIO SETTING : Select audio source of output 1~4 from input 1~4 or off
- WINDOW LAYOUT : Select windows layout from default 1~4 or user define 1~4
- MULTIVIEW SCENCE : Select SCENCE 1~8 to load or save
- REFRESH : Refresh the information of host
- APPLY : Apply changes

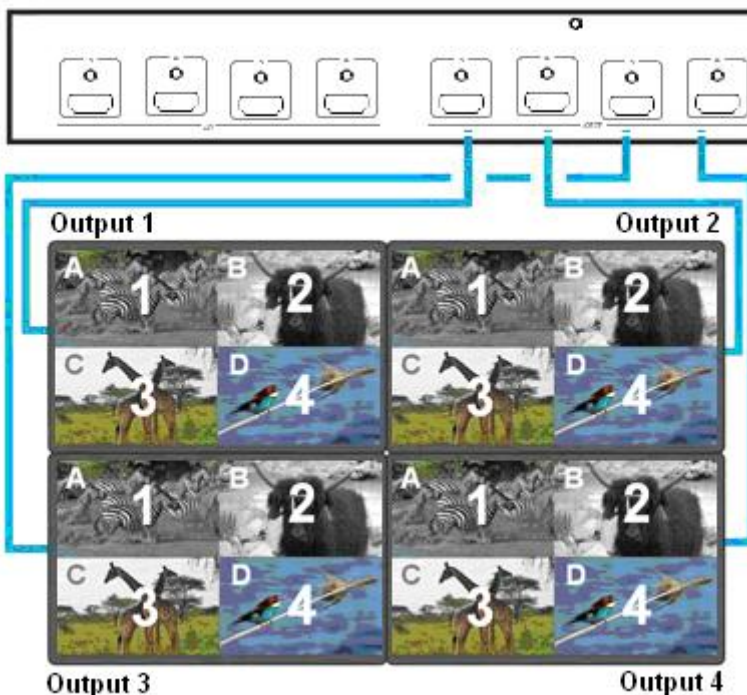

Note: When in Multiview mode, adjustment to the picture settings controlled through the OSD menu or WebGUI (contrast, brightness, saturation, hue) will effect the specific quadrant of all displays ("OUT1" for A,"OUT2" for B,"OUT3" for C or "OUT4" for D), regardless of which video source A,B,C or D is showing.

# Matrix

4x4 SEAMLESS MATRIX/MULTIVIEW/VIDEOWALL

ROUTING | SETUP | NETWORK | SYSTEM | ADVANCE | POWER STATUS: ON | LOG OUT

MULTIVIEW | **MATRIX** | VIDEOWALL

**VIDEO SETTING**

	Output1	Output2	Output3	Output4
Input1	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input2	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
Input3	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
Input4	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
Off	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**AUDIO SETTING**

OUT1 AUDIO

OUT2 AUDIO

OUT3 AUDIO

OUT4 AUDIO


REFRESH    APPLY

**MATRIX SCENCE**

SCENCE#1

LOAD    SAVE

- VIDEO SETTING : Select video source of output 1~4 to input 1~4, off or follow.
- AUDIO SETTING : Select audio source of output 1~4 from input 1~4,off or follow
- MATRIX SCENCE : Select SCENCE 1~8 to load or save
- REFRESH : Refresh the information of host
- APPLY : Apply changes

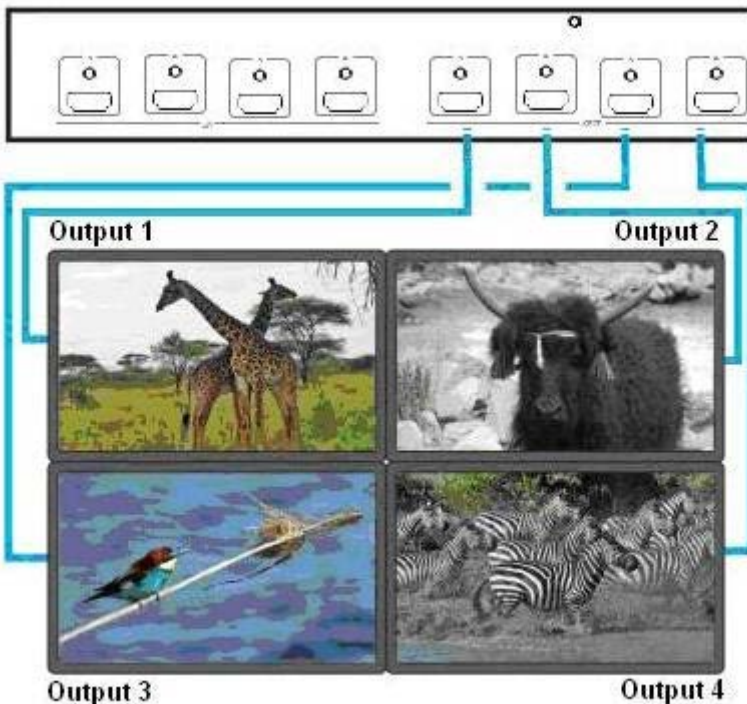

Note: When in Matrix mode, adjustment to the picture settings controlled through the OSD menu or the WebGUI (contrast, brightness, saturation, hue) will effect the specific input sources and subsequent screen images.

**Note: This SPLITMUX can work in Multiview mode or Matrix mode, but not both at the same time.**


# VIDEOWALL

4x4 SEAMLESS MATRIX/MULTIVIEW/VIDEOWALL

ROUTING SETUP NETWORK SYSTEM ADVANCE POWER STATUS: ON LOG OUT

MULTIVIEW MATRIX VIDEOWALL

### VIDEO SETTING

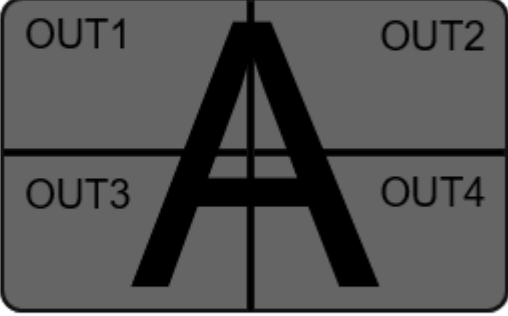


### AUDIO SETTING

OUT1 AUDIO	<input type="text" value="FOLLOW"/>
OUT2 AUDIO	<input type="text" value="FOLLOW"/>
OUT3 AUDIO	<input type="text" value="FOLLOW"/>
OUT4 AUDIO	<input type="text" value="FOLLOW"/>

VIDEO SOURCE SELECT

VIDEOWALL SCENCE


- VIDEO SETTING : Display videowall block of output 1~4
  - AUDIO SETTING : Select audio source of output 1~4 from input 1~4,off or follow
  - Video SCENCE : Select SCENCE 1~4 to load
  - REFRESH : Refresh the information of host
  - APPLY : Apply changes
- \*SCENCE 1 is factory default

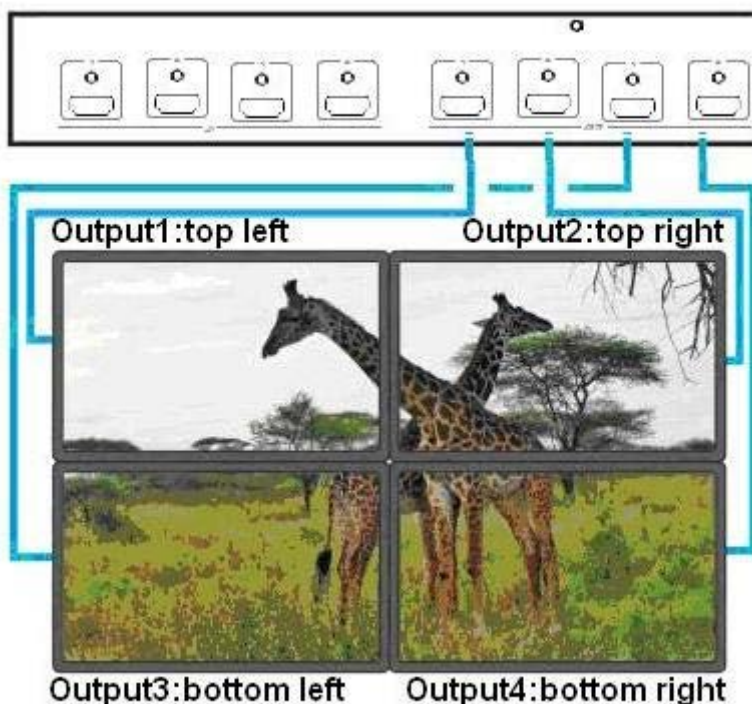



# SETUP

4x4 HDMI MATRIX/MULTIVIEW/VIDEOWALL

ROUTING **SETUP** NETWORK SYSTEM ADVANCE POWER STATUS: ON  LOG OUT

OUTPUT RESOLUTION

1080P60

HDCP SETTING

FOLLOW INP

ID SETTING

DEVICE ID 0

REMOTE ID 0

PICTURE SETTING

	OUT1	OUT2	OUT3	OUT4
CONTRAST	50	50	50	50
BRIGHTNESS	50	50	50	50
SATURATION	50	50	50	50
HUE	50	50	50	50

OSD SETTING

MENU TIMEOUT 20

INFO TIMEOUT 5

INFO POSITION LEFT T

INFO DISPLAY ON

REFRESH

APPLY

- OUTPUT RESOLUTION : Support 480P, 576P, 720P50, 720P60, 1080P24, 1080P50, 1080P60, **Default 1080P60**, 1024x768, 1280x800, 1280x1024, 1366x768, 1440x900, 1600x1200, 1680x1050, 1920x1200
- HDCP SETTING : Set HDCP always on or follow input.
- ID SETTING : Set DEVICE ID, **Default 0**, REMOTE ID, **Default 0**
- PICTURE SETTING : Set CONTRAST, BRIGHTNESS, SATURATION, HUE of output 1~4, **Default 50**
- OSD SETTING : Set MENU TIMEOUT, **Default 20s**, INFO TIMEOUT, **Default 5s**, INFO POSITION, **Default LEFT TOP**, INFO DISPLAY, **Default ON**
- REFRESH : Refresh the information of host
- APPLY : Apply changes

# NETWORK

4x4 HDMI MATRIX/MULTIVIEW/VIDEOWALL


ROUTING | SETUP | **NETWORK** | SYSTEM | ADVANCE | POWER STATUS: ON | LOG OUT

IP ADDRESS	<input type="text" value="192.168.0.232"/>	
SUBNET MASK	<input type="text" value="255.255.255.0"/>	
GATEWAY IP	<input type="text" value="192.168.0.1"/>	
DHCP CLIENT	<input type="text" value="OFF"/>	<input type="button" value="REFLASH"/>
MEDIA TYPE	<input type="text" value="AUTO"/>	<input type="button" value="APPLY"/>
MAC FILTER	<input type="text" value="OFF"/>	
MAC ADDRESS 1	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 2	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 3	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 4	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 5	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 6	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 7	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 8	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 9	<input type="text" value="0.0.0.0.0.0"/>	
MAC ADDRESS 10	<input type="text" value="0.0.0.0.0.0"/>	

- IP ADDRESS : Set IP address, **Default 192.168.0.200**
- SUBNET MASK : Set Subnet mask, **Default 255.255.255.0**
- GATEWAY : Set gateway address, **Default 192.168.0.1**
- DHCP CLIENT :  
ON:Get IP Address, Subnet Mask, Gateway from existing DHCP server  
OFF:Set IP Address, Subnet Mask, Gateway by WebGUI or OSD menu manually, **Default OFF**
- MEDIA TYPE : Set link speed of Ethernet port to 10 / 100 / Auto detect, **Default AUTO**
- MAC FILTER: Add up to 10 registered MAC Address, only the MAC address which is in the list can be able to connect host by Ethernet, **Default OFF.**
- REFRESH : Refresh the information of host
- APPLY : Apply changes

# SYSTEM

4x4 SEAMLESS MATRIX/MULTIVIEW/VIDEOWALL

ROUTING | SETUP | NETWORK | **SYSTEM** | ADVANCE | POWER STATUS: ON  LOG OUT

PASSWORD


NEW PASSWORD

CONFIRM PASSWORD


- PASSWORD : Enter old password, **Default 123**
- NEW PASSWORD : Enter new password
- CONFIRM PASSWORD : Enter new password again to confirm
- APPLY : Apply changes

# ADVANCE

4x4 HDMI MATRIX/MULTIVIEW/VIDEOWALL

ROUTING | SETUP | NETWORK | SYSTEM | **ADVANCE** | POWER STATUS: ON  LOG OUT

**Window Edit**

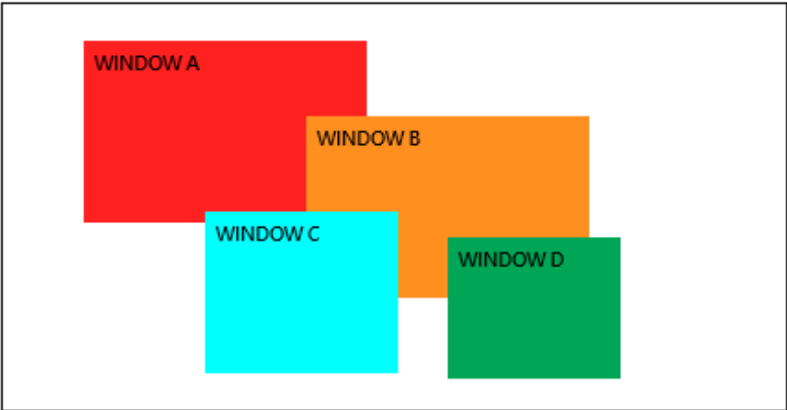

	WINDOW A	WINDOW B	WINDOW C	WINDOW D
WIDTH	<input type="text" value="640"/>	<input type="text" value="640"/>	<input type="text" value="640"/>	<input type="text" value="640"/>
HEIGHT	<input type="text" value="480"/>	<input type="text" value="480"/>	<input type="text" value="480"/>	<input type="text" value="480"/>
X.POS	<input type="text" value="100"/>	<input type="text" value="800"/>	<input type="text" value="100"/>	<input type="text" value="900"/>
Y.POS	<input type="text" value="10"/>	<input type="text" value="10"/>	<input type="text" value="510"/>	<input type="text" value="490"/>
PRIORITY	<input type="text" value="1"/>	<input type="text" value="1"/>	<input type="text" value="3"/>	<input type="text" value="4"/>
BORDER	<input type="text" value="YES"/>	<input type="text" value="YES"/>	<input type="text" value="YES"/>	<input type="text" value="YES"/>
COLOR	<input type="text" value="BLUE"/>	<input type="text" value="PURPLE"/>	<input type="text" value="GREY"/>	<input type="text" value="WHITE"/>

WINDOW LAYOUT


- WIDTH, HEIGHT: Set size of the windows.
- X.POS,Y.POS: Set top left position of window by x, y coordinate.
- PRIORITY: Set the priority of windows, 1 is top and 4 is bottom.
- BORDER: Select YES to show border of window, select NO to disable.
- COLOR: Set color of border.
- WINDOW LAYOUT : Select windows layout from user define 1~4 to load or save
- LOAD: Select windows layout from user define 1~4 to modify
- SAVE: Save windows layout to user define 1~4 after change the value
- **PREVIEW: Press to preview changes made to the settings. You must return to this window immediately and press SAVE to save the changes.**

## Advance Settings in Multiview mode:

Some of the possibilities are shown below along with configuration parameters (based on the current output resolution set at 1920 x 1080):

### 1. Screen Split in Two

#### a) Vertically

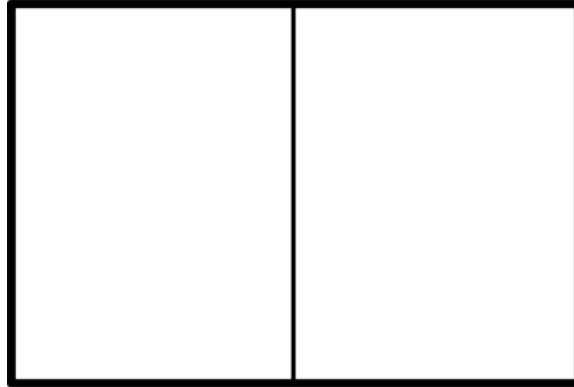

Parameter	Window A	Window B	Window C	Window D
WIDTH	960	960	0	0
HEIGHT	1080	1080	0	0
X POS	0	960	0	0
Y POS	0	0	0	0


#### b) Horizontally



Parameter	Window A	Window B	Window C	Window D
WIDTH	1920	1920	0	0
HEIGHT	540	540	0	0
X POS	0	0	0	0
Y POS	0	540	0	0


2. Three Split Screens

a) Vertically

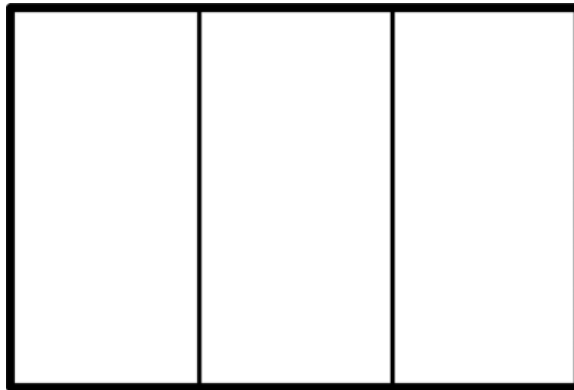

Parameter	Window A	Window B	Window C	Window D
WIDTH	640	640	640	0
HEIGHT	1080	1080	1080	0
X POS	0	640	1280	0
Y POS	0	0	0	0


b) Horizontally:



Parameter	Window A	Window B	Window C	Window D
WIDTH	1920	1920	1920	0
HEIGHT	360	360	360	0
X POS	0	0	0	0
Y POS	0	360	720	0


3. Four split screens

a) Vertically

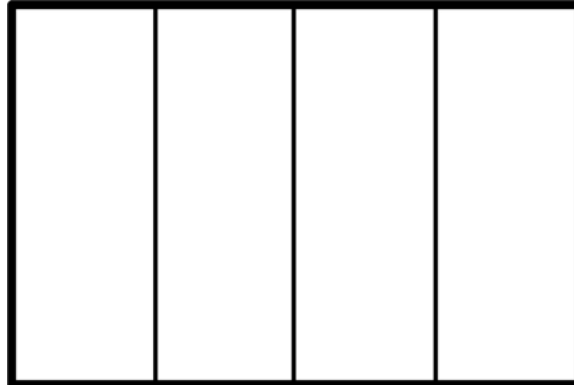

Parameter	Window A	Window B	Window C	Window D
WIDTH	480	480	480	480
HEIGHT	1080	1080	1080	1080
X POS	0	480	960	1440
Y POS	0	0	0	0

b) Horizontal



Parameter	Window A	Window B	Window C	Window D
WIDTH	1920	1920	1920	1920
HEIGHT	270	270	270	270
X POS	0	0	0	0
Y POS	0	270	540	810

## RS232 remote control command:

Connect the RS232 CONSOLE port to the COM port of the host by an F/M RS232 straight cable (pin 2 to pin 2; pin 3 to pin 3, pin 5 to pin 5)

Communication format is 9600, 8, N, 1 (9600 bps, 8 data bits, no parity check, 1 stop bit)

CONSOLE



### Operation Instruction format:

Command +  $\Delta$ (Space) + Parameter + Enter

[Command]

[Description]

[Command]		[Description]
POWER	y	Power on/standby
SMOUT1	n	Output 1 from input n in seamless matrix
SMOUT2	n	Output 2 from input n in seamless matrix
SMOUT3	n	Output 3 from input n in seamless matrix
SMOUT4	n	Output 4 from input n in seamless matrix
SMOUTALL	n	All output from input n in seamless matrix
SMADOOOUT1	n	Output 1 audio source from input n in seamless matrix
SMADOOOUT2	n	Output 2 audio source from input n in seamless matrix
SMADOOOUT3	n	Output 3 audio source from input n in seamless matrix
SMADOOOUT4	n	Output 4 audio source from input n in seamless matrix
SMADOOOUTALL	n	All output audio source from input n in seamless matrix
MVWINA	n	Window A from input n in multiview
MVWINB	n	Window B from input n in multiview
MVWINC	n	Window C from input n in multiview
MVWIND	n	Window D from input n in multiview
MVWINALL	n	Set all windows from input n in multiview
MVADOOOUT1	n	Output 1 audio source from input n in multiview
MVADOOOUT2	n	Output 2 audio source from input n in multiview
MVADOOOUT3	n	Output 3 audio source from input n in multiview
MVADOOOUT4	n	Output 4 audio source from input n in multiview
MVADOOOUTALL	n	All output audio source from input n in multiview
VDWALLRX	n	Input port n in video wall
VDWALLADOOOUT1	n	Output 1 audio source from input n in video wall
VDWALLADOOOUT2	n	Output 2 audio source from input n in video wall
VDWALLADOOOUT3	n	Output 3 audio source from input n in video wall
VDWALLADOOOUT4	n	Output 4 audio source from input n in video wall
VDWALLADOOOUTALL	n	All output audio source from input n in video wall
DHCP	y	DHCP Client on/off
IP_ADDRESS	[x.x.x.x]	Set IP address
SUBNET_MASK	[x.x.x.x]	Set subnet mask
GATEWAY	[x.x.x.x]	Set gateway
MEDIA_TYPE	z	Set Ethernet link speed
MAC_FILTER	y	MAC filter on/off
VERSION		Display firmware version
HELP		Show all commands
[SYMBOL]		[PARAMETER]
N		0   1   2   3   4 n=0(OFF) n=1(INPUT1) n=2(INPUT2) n=3(INPUT3) n=4(INPUT4)
y		00=OFF, 01=ON
z		00=10M, 01=100M 02=AUTO
[x.x.x.x]		Ethernet parameter EX.192.168.0.1

### Example:

SMADOOOUT1 $\Delta$ 03

Set output 1 switch to input 3 in MATRIX mode

MVADOOOUT3 $\Delta$ 04

Set output 3 switch to input 4 in MULTIVIEW mode

VDWALLADOOOUT3 $\Delta$ 02

Set audio output from input 2 in VIDEOWALL mode

Commands are **case insensitive**.

The host will reply **OK** once string is correct, **NG** in case of incorrect string

**Specification:**

<b>ITEM NO.</b>	<b>SPLITMUX-4X4-HDVWC</b>
Resolution	480i/p, 576i/p, 720p, 1080i/p@60Hz
HDMI Input	HDMI Type A x 4
HDMI Output	HDMI Type A x 4
Ethernet Connector	RJ45 x 1
RS232 Connector	DB9 Male x 1 (Console)
IR Carrier	± 45 degree
Power Supply	DC 12V 4.16A
Power Consumption	2A (Max)
Temperature	Operation: 0 to 55°C, Storage: -20 to 85°C, Humidity: up to 95%
Dimensions mm	483 x 177 x 44
Weight g	2300

RoHS   