

## IP CAMERA CONFIGURATION IN ENVIROMUX WEB INTERFACE

The IP cameras in the chart below can be monitored by the E-16D/5D/2D and be used to take snapshots and attach them to alert messages sent to users in the E-16D/5D/2D.

The images that are attached will be at the default resolution for each camera:

| Model             | Default Resolution | Current Firmware Version                   |
|-------------------|--------------------|--|
| E-IPCAM-WHNO-V2   | 1920x1080          | v10.3.141.1                                |
| E-IPCAM-DHNPO-V2P | 1920X1080          | v5.4.5 build 170124                        |
| E-IPCAM-WHNPT-V4  | 1920x1080          | v2.800.0000000.1.R, Build Date: 2019-09-27 |

To configure the IP camera to capture this image, enter the indicated text in the “Image URL” box on the “Configure IP Cameras” page of the ENVIROMUX Web Interface. Also add the URL Type, IP address, Username and Password as indicated.

### For E-IPCAM-WHNO-V2:

Image URL: <IP ADDRESS>/cgi-bin/hi3510/tmpfs/auto.jpg  
 URL Type: JPEG  
 Default IP Address: 192.168.1.88  
 Default Username: admin  
 Default Password: admin

### For E-IPCAM-DHNPO-V2P

Image URL: <IP ADDRESS>/streaming/channels/1/picture  
 URL Type: JPEG  
 Default IP Address: 192.168.1.64  
 Default Username: admin  
 Default Password: none- enter the password you assigned when you setup the camera

### For E-IPCAM-WHNPT-V4:

Image URL: <IP ADDRESS>/onvifsnapshot/media\_service/snapshot?channel=1&subtype=0  
 URL Type: JPEG  
 Default IP Address: see instruction on page 7  
 Default Username: admin  
 Default Password: admin (if you change settings in the camera, you will have to change this.)

For all models, be sure to put a checkmark in “Enable HTTP Auth”..

### Other ENVIROMUX Support

The IP cameras listed can all be **monitored only** (no snapshots) using the E-MICRO-TRHP. (The E-MICRO-TRHP requires firmware version 3.11 or newer).

The E-IPCAM-WHNPT-V4 can be used with the E-MINI-LXO and it can be monitored and take snapshots to attach to alert messages.

Only the E-IPCAM-WHNPT-V4 can be used with the E-1W model and it can only be monitored (no snapshots).

See compatibility table on next page.

**Note:** To use the E-IPCAM-WHNPT-V4 with the E-MINI-LXO, E-1W and for E-mailing snapshots on the E-xD, you must first disable ONVIF Authentication in the camera's software. See page 7.

## ENVIROMUX Model Compatibility

| Model             | Monitoring         | Snapshots for alerts |
|-------------------|--------------------|----------------------|
| E-IPCAM-WHNO-V2   | E-xD, E-MICRO-TRHP | E-xD Only            |
| E-IPCAM-DHNPO-V2P | E-xD, E-MICRO-TRHP | E-xD Only            |
| E-IPCAM-WHNPT-V4  | All Models         | E-xD, E-MINI-LXO     |

## Configure IP Cameras

[-] IP Camera #1

|                                 |                                     |   |
|---------------------------------|-------------------------------------|---|
| <b>Add to View</b>              | <input checked="" type="checkbox"/> | Enable this camera in the View page   |
| <b>Name</b>                     | <input type="text"/>                | Name of the IP camera   |
| <b>Image URL</b>                | <input type="text"/>                | Full path of the image file of the IP camera                                      |
| <b>URL Type</b>                 | <span>JPEG ▾</span>                 | Select IP Camera URL resource type. For RTSP URL's, management software is needed |
| <b>IP Address</b>               | <input type="text"/>                | IP address of the IP camera   |
| <b>Refresh Rate (x100 msec)</b> | <input type="text" value="2"/>      | Refresh rate of the image in hundreds of milliseconds                             |
| <b>Enable HTTP Auth</b>         | <input checked="" type="checkbox"/> | Use HTTP Authorization to access this camera                                      |
| <b>Enable Digest Access</b>     | <input type="checkbox"/>            | Use Digest Access Authentication to access this camera                            |
| <b>HTTP Auth Username</b>       | <input type="text" value="admin"/>  | Username to be used in HTTP Authorization   |
| <b>HTTP Auth Password</b>       | <input type="password"/>            | Password to be used in HTTP Authorization   |

**Note:** At present, the E-xD supports JPEG and MJPEG type images taken by the IP cameras we offer. The RTSP protocol option is not supported at this time.

[+] IP Camera #2

[+] IP Camera #3

[+] IP Camera #4

Figure 1- E-xD IP Camera configuration page

## IP Camera Settings

|                           |   |   |
|---------------------------|---|---|
| <b>Name</b>               | <input type="text" value="IP Camera #1"/>   | The name assigned for this IP Camera                  |
| <b>Image URL</b>          | <input type="text"/>                        | Full path of the image file of the IP camera          |
| <b>IP Address</b>         | <input type="text"/>                        | IP address of the IP camera                           |
| <b>Refresh Rate</b>       | <input type="text" value="10"/> (x100 msec) | Refresh rate of the image in hundreds of milliseconds |
| <b>HTTP Auth Username</b> | <input type="text" value="default"/>        | Username to be used in HTTP Authorization             |
| <b>HTTP Auth Password</b> | <input type="text" value="default"/>        | Password to be used in HTTP Authorization             |

The E-MICRO-TRHP will work with cameras that have authentication, but does not include the ability to take snapshots that can be added to email.

Figure 2- E-MICRO-TRHP IP Camera configuration page

## Configure IP Cameras

| IP Camera #1                    |   |
|---------------------------------|---|
| <b>Add to View</b>              | <input type="checkbox"/> Enable this camera in the View page                            |
| <b>Name</b>                     | <input type="text"/><br>Name of the IP camera   |
| <b>Image URL</b>                | <input type="text"/><br>Full path of the image file of the IP camera                    |
| <b>IP Address</b>               | <input type="text"/><br>IP address of the IP camera                                     |
| <b>Refresh Rate (x100 msec)</b> | <input type="text" value="0"/><br>Refresh rate of the image in hundreds of milliseconds |

Figure 3- E-MINI-LXO IP Camera configuration page

## IP Camera Settings

|                     |  |
|---------------------|--|
| <b>Name</b>         | <input type="text" value="IP Camera #1"/><br>The name assigned for this IP Camera                    |
| <b>Image URL</b>    | <input type="text"/><br>Full path of the image file of the IP camera                                 |
| <b>IP Address</b>   | <input type="text"/><br>IP address of the IP camera  |
| <b>Refresh Rate</b> | <input type="text" value="10"/> (x100 msec)<br>Refresh rate of the image in hundreds of milliseconds |

Figure 4- E-1W IP Camera configuration page

The E-MINI-LXO and E-1W do not support authentication. Only the E-IPCAM-WHNPT-V4 can be used with them provided you first disable ONVIF Authentication in the camera's software.

# Access Individual Camera Settings

## E-IPCAM-WHNO-V2

To access the **E-IPCAM-WHNO-V2** web interface to change its settings:

1. Connect the AC adapter to the camera to power it ON. Wait 30 seconds.
2. Connect an Ethernet cable between the camera and an available port on a router (connected to your network), or directly to a PC.

**Note: By default, this camera obtains an IP address from a DHCP server on the local network. To find the IP address of the camera, consult the DHCP client list on the DHCP server of your wireless router or use the discovery tool found in the e-ipcam-whno-v2.zip available on our [website](#). However, if there is no DHCP server available, or if you are connecting the camera directly with your PC without another device in-between, the static default IP address of this camera is 192.168.1.88.**


3. Open a browser (Internet Explorer, Firefox, etc) on that PC and enter the default IP **192.168.1.88**.
4. The login window will pop up.
5. Enter the default user name "admin" and default password "admin" (all lowercase letters).
6. Click "Login".



When opening the camera's interface, the browser will prompt you to install a plugin. The plugin is necessary to get the camera's video. Click the install link to download the plugin, and install it manually. If the browser prompts you to allow the plugin to work on the computer, hit "Allow" to ensure the plugin can run successfully.

You now have access to all internal settings of the camera.

If you make changes to the network settings, you will have to reset the IP camera and you will be forced to change the password. Please select a password that is at least 8 characters long, and include a combination of uppercase letters, lowercase letters, and numbers. Be sure to make note of the new password.

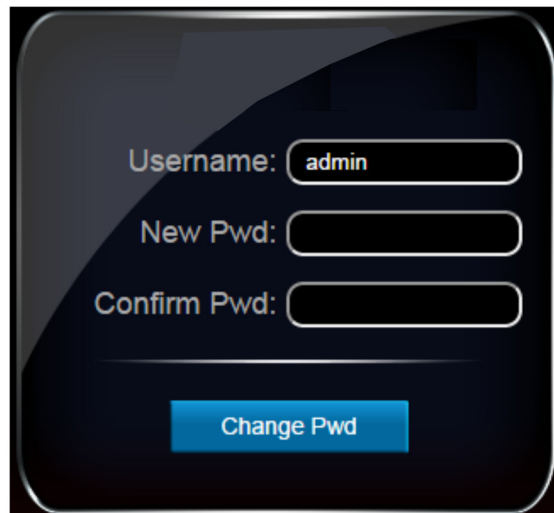

## E-IPCAM-DHNPO-V2P

To access the **E-IPCAM-DHNPO-V2P** web interface to change its settings:

1. Connect the camera to a POE connected Ethernet cable to power it ON, or connect the supplied 12VDC power supply. The Ethernet cable must be connected to the same local network your PC is connected to.

**Note: By default, this camera obtains an IP address from a DHCP server on the local network. To find the IP address of the camera, consult the DHCP client list on the DHCP server of your wireless router or use the search tool (SADP.exe available from our [website](#)) and follow the instructions. (See image at bottom of page.)**

2. Open a browser (Internet Explorer, Firefox, etc) on that PC and enter the IP address found with the search tool. If no DHCP server exists, the default IP will be **192.168.1.64**.

3. The first time you do this, the Activation window will pop up. Assign a password. The password must contain a minimum of 8 characters, including upper case letters, lower case letters, numbers, and special characters. Be sure to make note of it after entering it. Then click "OK".

User Name: admin

Password:  ❌

Valid password range [8-16]. You can use a combination of numbers, lowercase, uppercase and special character for your password with at least two kinds of them contained.

Confirm:

OK

If you are using the SADP discovery tool to identify the IP address of the **E-IPCAM-DHNPO-V2P**, you will be able to assign the password from the discovery tool window (below).

Total number of online devices: 2

| ID  | Device Type      | Status   | IPv4 Address  | Port | Software Version    | IPv4 Gateway | HTTP Port | Device Serial No.     |
|-----|------------------|----------|---------------|------|---------------------|--------------|-----------|-----------------------|
| 001 | DS-2CD2125FWD-I  | Inactive | 192.168.1.64  | 8000 | V5.4.5build 1701... | 192.168.1.1  | 80        | DS-2CD2125FWD-I201706 |
| 002 | DS-2CD2122FWD-IS | Active   | 192.168.3.113 | 8000 | V5.5.0build 1707... | 192.168.3.3  | 80        | DS-2CD2122FWD-IS20180 |

Activate the Device

The device is not activated.

You can modify the network parameters after the device activation.

Activate Now

New Password:

Confirm Password:

Enable Hik-Connect

Activate

4. After the initial login and password assignment, the login screen will look like this.



5. Enter the username and assigned password. Then click “Login”.  
You now have access to all internal settings of the camera.


## E-IPCAM-WHNPT-V4

To access the **E-IPCAM-WHNPT-V4** web interface to change its settings:

1. Connect the AC adapter to the camera to power it ON. Wait 30 seconds.
2. Connect an Ethernet cable between the camera and an available port on a router (connected to your network), or directly to a PC.

**Note:** By default, this camera obtains an IP address from a DHCP server on the local network. To find the IP address of the camera, consult the DHCP client list on the DHCP server of your wireless router or use the IP Config tool found in the e-ipcam-whnpt-v4.zip available on our [website](#).

However, if there is no DHCP server available, or if you are connecting the camera directly with your PC without another device in-between, use the IP Config tool to discover the IP address.

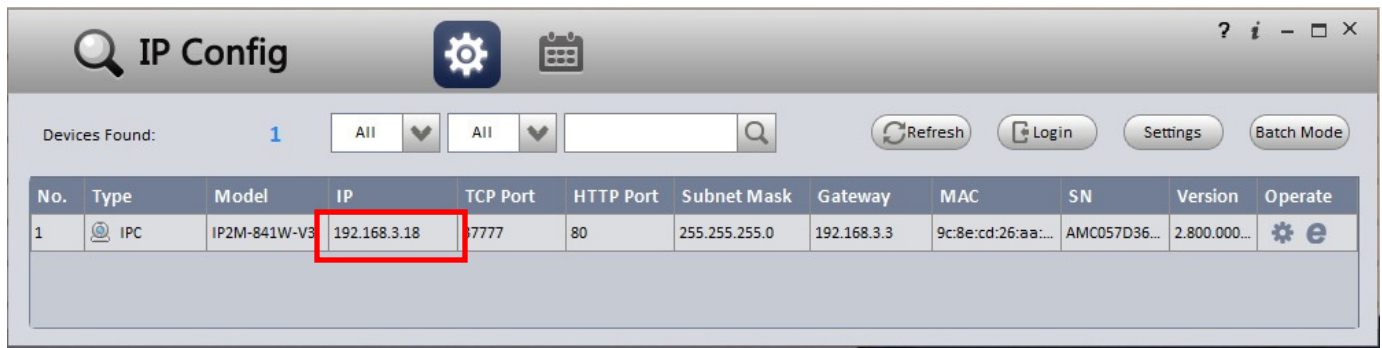

3. Open a browser (Internet Explorer, Firefox, etc) on that PC and enter the IP found in the client list or in the IP Config tool. (If you are not going to change the IP address, you can use that IP address on the ENVIROMUX "Configure IP Camera" page.)



4. The login window will pop up.

5. Enter the default user name "admin" and default password "admin" (all lowercase letters).


6. Click "Login".

You now have access to all internal settings of the camera.

If you make changes to the network settings, you will have to reset the IP camera and you will be forced to change the password. Please select a password that is at least 8 characters long, and include a combination of uppercase letters, lowercase letters, and numbers. Be sure to make note of the new password.

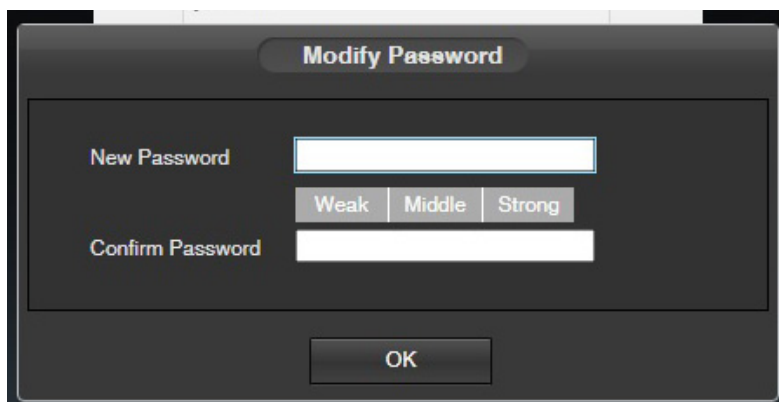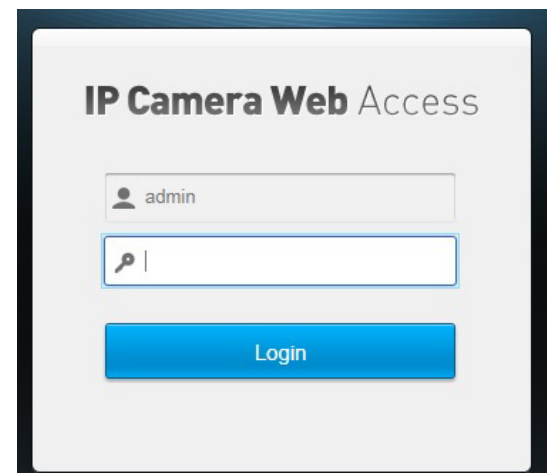

**Note:** To use the E-IPCAM-WHNPT-V4 with the E-MINI-LXO, E-1W and for E-mailing snapshots on the E-xD, you must first disable ONVIF Authentication in the camera's software. (ONVIF Authentication is enabled by default.) After changing the setting, click "Save".

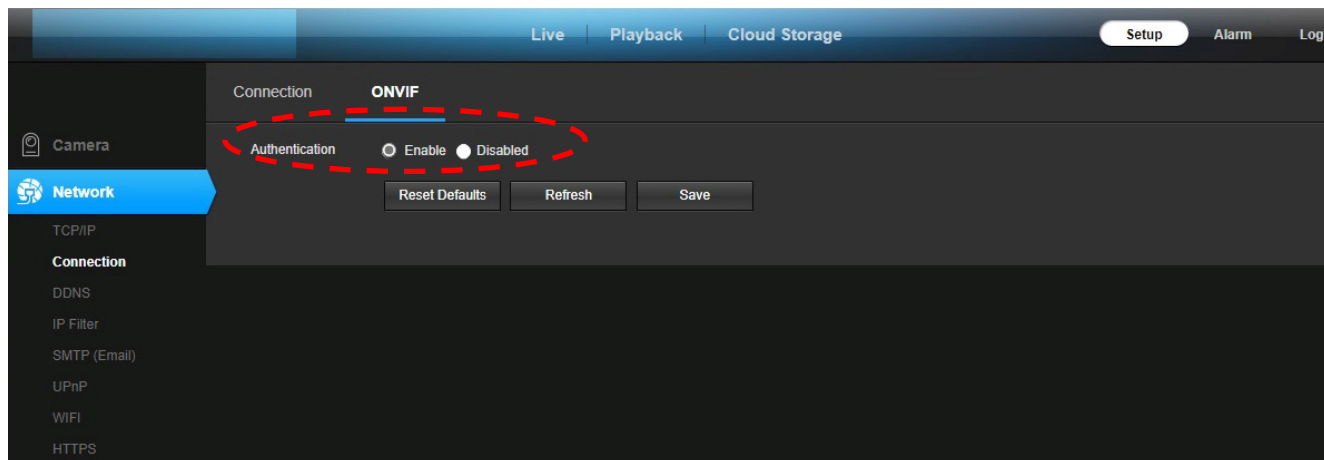

**Figure 5- ONVIF Authentication is disabled**

MAN285 REV 5/28/21